

IO.PMS-620N(ENG)

Edition 01.A.002/06.16

# APLISENS®

## USER MANUAL

### DIGITAL INDICATOR WITH RELAY OUTPUTS PMS-620N

*Firmware: from 5.23*



APLISENS S.A., 03-192 Warszawa, ul. Morelowa 7  
tel. +48 22 814 07 77; fax +48 22 814 07 78  
www.aplisens.pl, e-mail: [aplisens@aplisens.pl](mailto:aplisens@aplisens.pl)

Explanation of symbols used in the manual:

Symbol	Description
	This symbol denotes especially important guidelines concerning the installation and operation of the device. Not complying with the guidelines denoted by this symbol may cause an accident, damage or equipment destruction.
	This symbol denotes especially important characteristics of the unit. Read any information regarding this symbol carefully

## **BASIC REQUIREMENTS AND USER SAFETY**



**The manufacturer is not responsible for any damages caused by inappropriate installation, not maintaining the proper environmental conditions and using the unit contrary to its assignment.**

- Installation should be conducted by qualified personnel. During installation all available safety requirements should be considered. The fitter is responsible for executing the installation according to this manual, local safety and EMC regulations.
- In systems with manometers there exists, in case of leakage, a danger to staff on the side where the medium is under pressure. All safety and protection requirements must be observed during installation, operation and inspections.
- If a device is not functioning correctly, disconnect it and send it for repair to the manufacturer or to a firm authorized by the manufacturer.

Changes to the products manufacturing documentation may forestall a paper user updating. Current Instruction Manual is available at Producer [http. on www.aplisens.pl](http://www.aplisens.pl)

## CONTENTS

<b>1.</b>	<b>GENERAL CHARACTERISTICS .....</b>	<b>2</b>
<b>2.</b>	<b>TECHNICAL DATA .....</b>	<b>2</b>
<b>3.</b>	<b>DEVICE INSTALLATION .....</b>	<b>3</b>
3.1	UNPACKING .....	4
3.2	ASSEMBLY .....	4
3.3	CONNECTION METHOD.....	4
3.4	MAINTENANCE.....	11
<b>4.</b>	<b>FRONT PANEL DESCRIPTION.....</b>	<b>11</b>
<b>5.</b>	<b>PRINCIPLE OF OPERATION .....</b>	<b>12</b>
5.1.	MEASUREMENT MODE .....	12
5.2.	DETECTION OF THE PEAK VALUES .....	13
5.3.	CONTROL OF THE RELAY OUTPUTS .....	14
5.3.1.	<i>One threshold mode</i> .....	15
5.3.2.	<i>Two thresholds mode</i> .....	16
<b>6.</b>	<b>DEVICE PROGRAMMING .....</b>	<b>17</b>
6.1.	PROGRAMING MENU .....	17
6.2.	PARAMETERS EDITION.....	17
6.2.1.	<i>Numeric parameters (digit change mode)</i> .....	18
6.2.2.	<i>Numeric parameters (slide change mode)</i> .....	18
6.2.3.	<i>Switch parameters ("LIST" type)</i> .....	18
6.3.	MENU DESCRIPTION.....	19
6.3.1.	<i>"rEL1" menu</i> .....	19
6.3.2.	<i>"inPt" menu</i> .....	21
6.3.3.	<i>"bri" parameter</i> .....	25
6.3.4.	<i>"HOLd" menu</i> .....	25
6.3.5.	<i>"SECu" menu</i> .....	26
6.3.6.	<i>"rS" menu</i> .....	26
6.3.7.	<i>"Edit" parameter</i> .....	27
6.3.8.	<i>"dEFS" parameter</i> .....	27
6.3.9.	<i>"SErv" menu</i> .....	27
6.4.	MENU STRUCTURE .....	28
<b>7.</b>	<b>THE ALARM LED .....</b>	<b>30</b>
<b>8.</b>	<b>OVER CURRENT PROTECTION.....</b>	<b>30</b>
<b>9.</b>	<b>DISPLAYED VALUES CALCULATION .....</b>	<b>30</b>
9.1.	ADDITIONAL CALCULATIONS (USED CONVERSION CHARACTERISTIC) .....	30
9.1.1.	<i>Linear characteristic</i> .....	31
9.1.2.	<i>Square characteristic</i> .....	31
9.1.3.	<i>Square root characteristic</i> .....	32
9.1.4.	<i>User defined characteristic</i> .....	32
9.1.5.	<i>Volume characteristic of a cylindrical tank</i> .....	33
9.2.	EXAMPLES OF CALCULATIONS.....	34
<b>10.</b>	<b>THE MODBUS PROTOCOL HADLING .....</b>	<b>37</b>
10.1.	LIST OF REGISTERS.....	38
10.2.	TRANSMISSION ERRPRS DESCRIPTION .....	40
10.3.	EXAMPLES OF QUERY/ANSWER FRAMES .....	41
<b>11.</b>	<b>DEFAULT AND USER'S SETTINGS LIST.....</b>	<b>43</b>

## 1. GENERAL CHARACTERISTICS

The **PMS-620N** meter is equipped with one current input 0-20 / 4-20mA and one voltage input 0-5 / 1-5 / 0-10 / 2-10V. Current input has additionally overcurrent protection circuit, which protects standard resistor. The selection of active input is realized by software, and selected input can be changed at any time. Additionally the PMS-620N allows user to select a conversion characteristic of several kinds: linear, square, square root, user defined (max.20 points length) and volume characteristics of a cylindrical tank in the vertical and horizontal position. Result is showed on 4-digit LED display. Displayed values range can be selected by user, from -999 to 9999, plus decimal point.

The device can be equipped with two relay (or OC type) outputs. Device PMS-620N is equipped with RS-485 / Modbus RTU communication interface and sensor supply output. The meter can be ordered in three power supply versions.

The device has 4 buttons being used for main presets programming. To get high protection level, the keyboard is mounted under transparent cover.

PMS-620N can be used for controlling and regulation of processes need proportional and threshold control like: temperature processes (heating or cooling), valves controlling or other.

## 2. TECHNICAL DATA

Power supply voltage (depending on version)	85... <b>230</b> ...260V AC/DC, 50 ÷ 60 Hz (separated) max. 4,5 VA or 19... <b>24</b> ...50V DC (separated) max. 4,5 W or 16... <b>24</b> ...35V AC (separated) max. 4,5 VA
External fuse (required)	T - type, max. 2 A
Current input	0÷20 mA, 4÷20 mA overload protected, maximum input current about 40 mA
Current measurement accuracy	± 0,1% / 25°C; ± one digit (for 0÷20 mA range)
Current input resistance	< 65 Ω (typical 50 Ω)
Voltage input	0÷5 V, 1÷5 V, 0÷10 V, 2÷10 V
Voltage measurement accuracy	± 0,1% / 25°C; ± one digit (for 0÷10 V range)
Voltage input resistance	> 50 kΩ
Display range	-999 ÷ 9999, plus decimal point
Accepted prolonged input overload:	20%
Outputs	relay: 0 or 2 NO, 1A/250V AC (cos j = 1) or OC-type: 0 or 2 30mA / 30VDC / 100mW sensor power supply: 24V +5% -10% / max. 100 mA, stabilized
Communication interface	RS 485, 8N1 and 8N2, Modbus RTU, not separated
Baud rate	1200 bit/s ÷ 115200 bit/s
Display	LED, 4 digit, 20mm height, red
Protection level	IP 65

Housing type	wall mounted
Housing material	ABS + fibreglass
Housing dimensions	without glands: 110 x 80 x 67 mm with glands: 110 x 105 x 67 mm
Operating temperature	-20°C do +50°C
Storage temperature	-20°C do +70°C
Humidity	5 to 90% no condensation
Altitude	up to 2000 meters above sea level
Screws tightening max. torque	0,5 Nm
Max. connection leads diameter	2,5 mm <sup>2</sup>
Safety requirements	according to: EN 61010-1 installation category: II pollution degree: 2 voltage in relation to ground: 300V AC  insulation resistance: >20MW insulation strength between power supply and input/output terminal: 1min. @ 2300V insulation strength between relays terminal: 1min. @ 1350V
EMC	according to: EN 61326-1



**This is a class A unit. In a residential or a similar area it can cause radio frequency interference. In such cases the user can be requested to use appropriate preventive measures.**

### **3. DEVICE INSTALLATION**

The unit has been designed and manufactured in a way assuring a high level of user safety and resistance to interference occurring in a typical industrial environment. In order to take full advantage of these characteristics installation of the unit must be conducted correctly and according to the local regulations.



- Read the basic safety requirements on page 2 prior to starting the installation.
- Ensure that the power supply network voltage corresponds to the nominal voltage stated on the unit's identification label.
- The load must correspond to the requirements listed in the technical data.
- All installation works must be conducted with a disconnected power supply.
- Protecting the power supply connections against unauthorized persons must be taken into consideration.

### **3.1 UNPACKING**

After removing the unit from the protective packaging, check for transportation damage. Any transportation damage must be immediately reported to the carrier. Also, write down the unit serial number located on the housing and report the damage to the manufacturer.

Attached with the unit please find:

- User's manual;
- Warranty.

### **3.2 ASSEMBLY**



- Disconnect the power supply prior to starting assembly.
- Check the connections are wired correctly prior to switching the unit on.



To install device on the wall, a pinholes should be made. Figure 3.1 presents dimensions of the device and distances between holes. The back side of the device has four mounting holes. This part of the case should be mounted to a wall by screws.

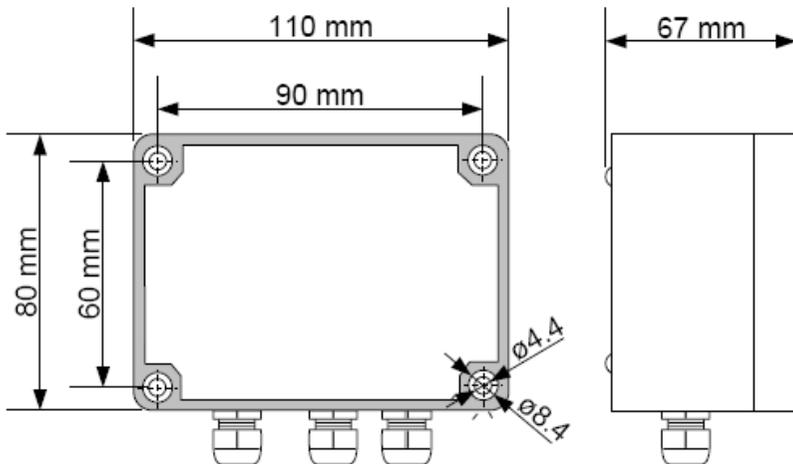


Figure 3.1. Device and assembly dimensions

### **3.3 CONNECTION METHOD**



- Installation should be conducted by qualified personnel. During installation all available safety requirements should be considered. The fitter is responsible for executing the installation according to this manual, local safety and EMC regulations.

- The unit is not equipped with an internal fuse or power supply circuit breaker. Because of this an external time-delay cut-out fuse with a small nominal current value must be used (recommended bipolar, max. 2A) and a power supply circuit breaker located near the unit. In the case of using a monopolar fuse it must be mounted on the phase cable (L).

- The power supply network cable diameter must be selected in such a way that in the case of a short circuit of the cable from the side of the unit the cable shall be protected against destruction with an electrical installation fuse.
- Wiring must meet appropriate standards and local regulations and laws.
- In order to secure against accidental short circuit the connection cables must be terminated with appropriate insulated cable tips.
- Tighten the clamping screws. The recommended tightening torque is 0.5 Nm. Loose screws can cause fire or defective operation. Over tightening can lead to damaging the connections inside the units and breaking the thread.
- In the case of the unit being fitted with separable clamps they should be inserted into appropriate connectors in the unit, even if they are not used for any connections.
- **Unused terminals (marked as n.c.) must not be used for connecting any connecting cables (e.g. as bridges), because this can cause damage to the equipment or electric shock.**
- If the unit is equipped with housing, covers and sealing to, protecting against water intrusion, pay special attention to their correct tightening or clamping. In the case of any doubt consider using additional preventive measures (covers, roofing, seals, etc.). Carelessly executed assembly can increase the risk of electric shock.
- After the installation is completed do not touch the unit's connections when it is switched on, because it carries the risk of electrical shock.

***Due to possible significant interference in industrial installations appropriate measures assuring correct operation of the unit must be applied. To avoid the unit of improper indications keep recommendations listed below.***

- Avoid running signal cables and transmission cables together with power supply cables and cables controlling inductive loads (e.g. contactors). Such cables should cross at a right angle.
- Contactor coils and inductive loads should be equipped with interference protection systems, e.g. RC-type.
- Use of screened signal cables is recommended. Signal cable screens should be connected to the earthing only at one of the ends of the screened cable.
- In the case of magnetically induced interference the use of twisted pair of signal cables is recommended. Twisted pair (best if shielded) must be used with RS-485 serial transmission connections.
- In the case of magnetically induced interference the use of twisted pair of signal cables is recommended. Twisted pair (best if shielded) must be used with RS-485 serial transmission connections.
- In the case of interference from the power supply side the use of appropriate interference filters is recommended. Bear in mind that the connection between the filter and the unit should be as short as possible and the metal housing of the filter must be connected to the earth with the largest possible surface. The cables connected to the filter output must not be run with cables with interference (e.g. circuits controlling relays or contactors).

Connection of the power supply, and the measurement and controlling signals should be made by screw connectors mounted inside the housing.

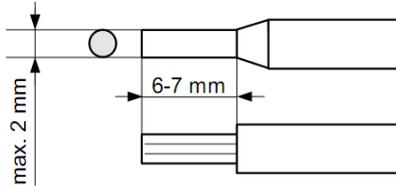


Figure 3.2. Method of cable insulation replacing and cable terminals



All connections must be made while power supply is disconnected!

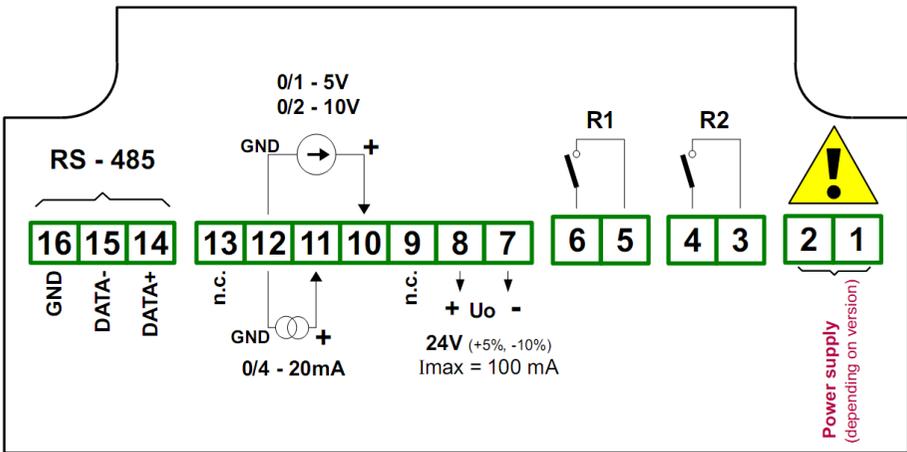


Figure 3.3. Terminals description (relay outputs)

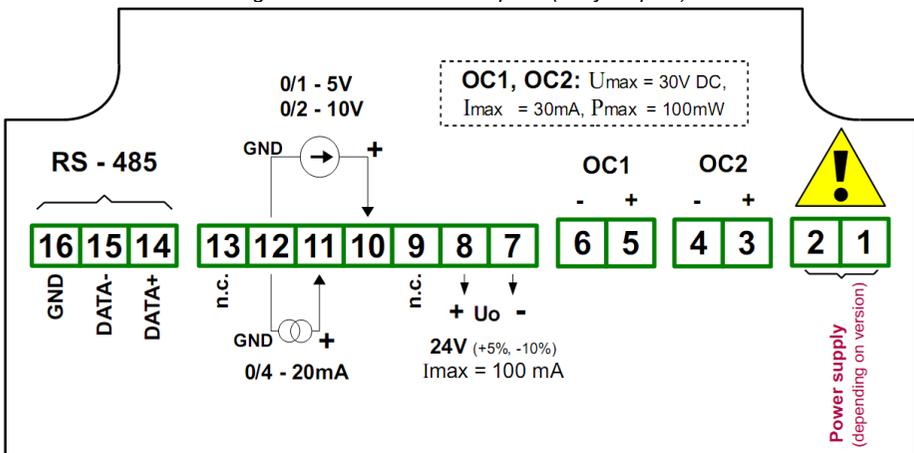


Figure 3.4. Terminals description (OC-type outputs)

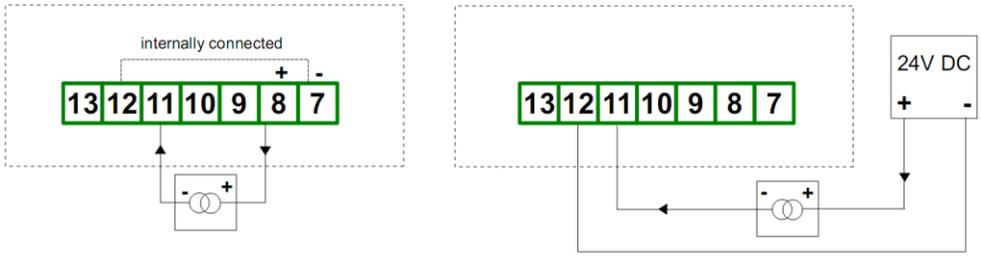


Figure 3.5. Connection of 2-wire current converters

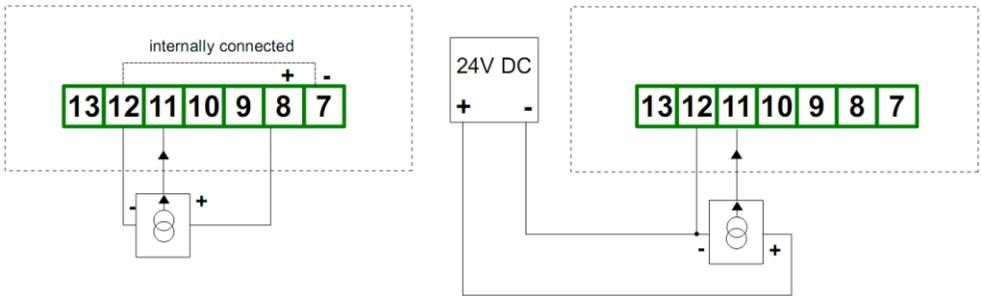


Figure 3.6. Connection of 3-wire current converters

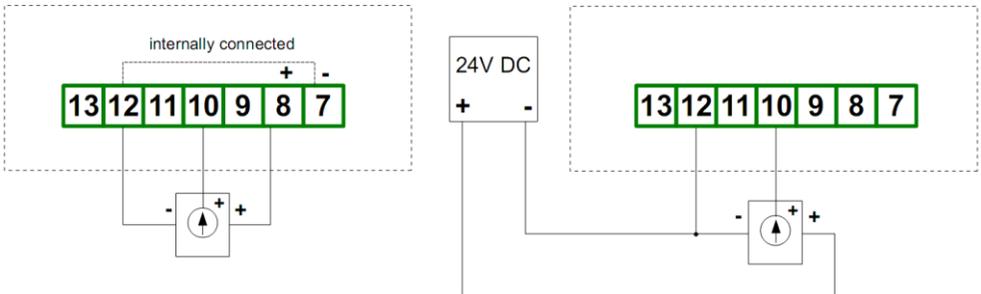


Figure 3.7. Connection of voltage converters

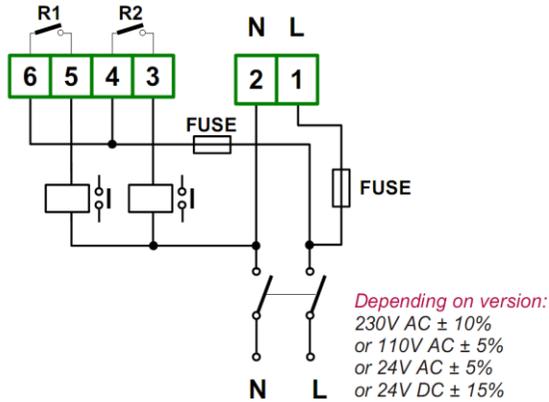


Figure 3.8. Connection of power supply and relays

Contacts of relay outputs are not equipped with spark suppressors. While use the relay outputs for switching of inductive loads (coils, contactors, power relays, electromagnets, motors etc.) it is required to use additional suppression circuit (typically capacitor 47nF/ min. 250VAC in series with 100R/5W resistor), connected in parallel to relay terminals or (better) directly on the load. In consequence of using the suppression circuit, the level of generated electromagnetic disturbances is lower, and the life of relay contacts rises.

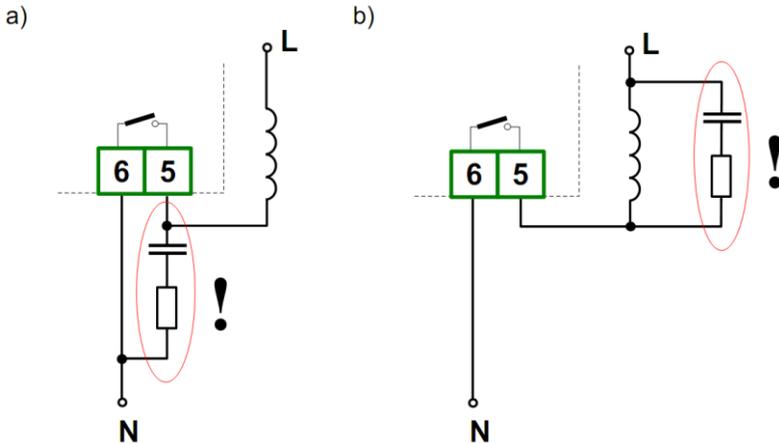


Figure 3.9. Examples of suppression circuit connection:  
 a) to relay terminals; b) to the inductive load

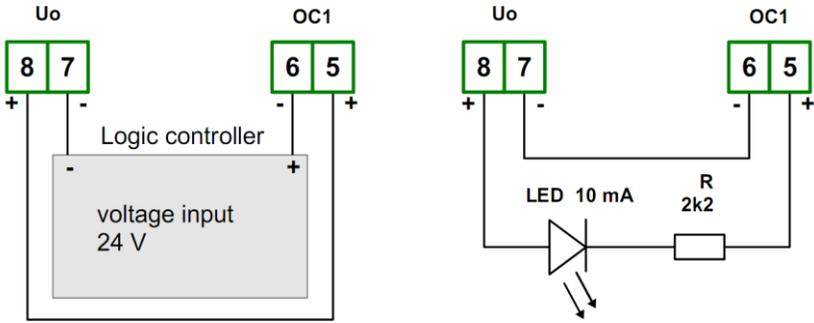


Figure 3.10. Example of OC-type outputs connection

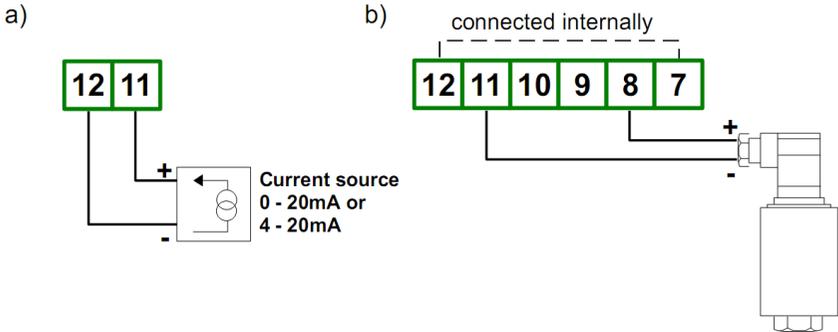


Figure 3.11. Connections of 2-wire sensor: a) active, b) passive (needs additional supply)



PMS-620N meter has no galvanic separation between measurement input and RS-485 interface. If serial connection of multiple units is made or serial connection with other device, without galvanic separation of RS-485 interface, is made then RS-485 interface separators must to be used certainly (Figure 3.12, 3.13). If RS-485 interfaces are isolated or not used then the separators are not necessary.

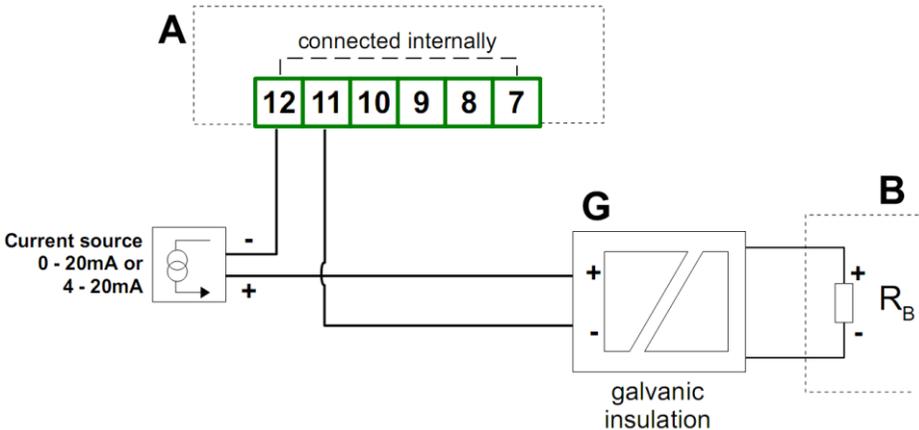


Figure 3.12. Serial connection of active 2-wire sensor with PMS-620N unit and other current measurement device (e.g. PLC controller)

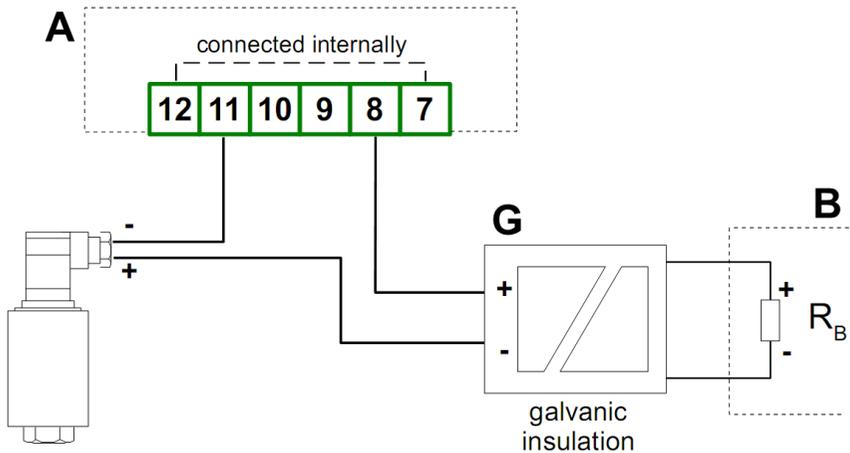


Figure 3.13. Serial connection of passive 2-wire sensor with PMS-620N unit and other current measurement device (e.g. PLC controller)



If device **B** (Figure 3.12 , 3.13) is equipped with galvanic separated input or if different potentials between **A** and **B** devices signal grounds are allowed (e.g. if RS- 485 interface is separated or unused), current loop can be closed without separator **G**.

#### **Calculation of maximal allowable resistance of separator's input**

Maximal resistance of the input ( $R_{G\ max.}$ ) and wires ( $R_{W\ max.}$ ) are calculated for circuit from Figure 3.12. Used symbols are described below.

- $U_{S\ min.}$  - minimal sensor supply voltage (given in technical data of sensor);
- $U_g$  - voltage drop on galvanic separator input (constant for 4-20 mA range of current);
- $I_{max} = 20\ mA$  - maximal current of current loop;
- $U_O = 24V$  - sensor supply output voltage of device **A**;
- $R_O = 30\ \Omega$  - sensor supply output resistance of device **A**;
- $R_{INP} = 50\ \Omega$  - measurement input resistance of device **A**.

$$R_{G\ max.} + R_{W\ max.} = \frac{U_O - U_{S\ min.} - U_g}{I_{max}} - R_{INP} - R_O$$

Let  $U_{S\ min.}=12V$  and  $U_g=5V$  then:

$$R_{G\ max.} + R_{W\ max.} = \frac{24 - 12 - 3,5}{0,02} - 50 - 30 = 270\ \Omega$$

If current loop is closed without the separator **G**, then sum of measurement input resistance ( $R_{B\ max.}$ ) of device **B** (Figure 3.13) and connections resistance ( $R_{W\ max.}$ ) should be not greater than result of given below formula:

$$R_{B\ max.} + R_{W\ max.} = \frac{U_o - U_{S\ min.}}{I_{max}} - R_{INP.} - R_o$$

For example if  $U_{s\ min.}=12V$  then:

$$R_{B\ max.} + R_{W\ max.} = \frac{24 - 12}{0,02} - 50 - 30 = 520\ \Omega$$

### 3.4 MAINTENANCE

The unit does not have any internal replaceable or adjustable components available to the user. Pay attention to the ambient temperature in the room where the unit is operating. Excessively high temperatures cause faster ageing of the internal components and shorten the fault-free time of the unit's operation.

In cases where the unit gets dirty do not clean with solvents. For cleaning use warm water with small amount of detergent or in the case of more significant contamination ethyl or isopropyl alcohol.




Using any other agents can cause permanent damage to the housing.



Product marked with this symbol should not be placed in municipal waste. Please check local regulations for disposal of electronic products.

## 4. FRONT PANEL DESCRIPTION

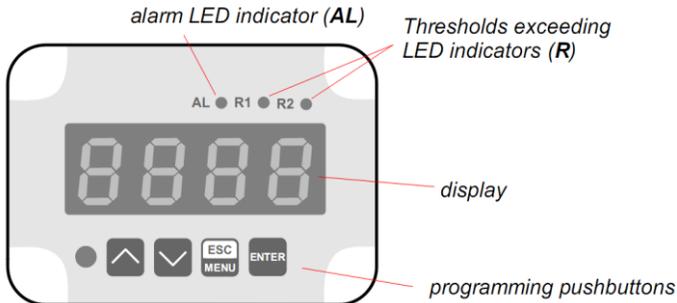

### Symbols and functions of push-buttons:



Symbol used in the manual: **[ESC/MENU]**

Functions:

- Enter to main menu (press and hold by at least 2 sec.);
- Exit the current level and Enter to previous menu (or measure mode);
- Cancel the changes made in parameter being edited.



Symbol used in the manual: [ENTER]

Functions:

- Start to edit the parameter;
- Enter to the sub-menu;
- Confirmation of changes made in parameter being edited.



Symbol used in the manual: [^] [v]

Functions:

- Change of the present menu;
- Modification of the parameter value;
- Change of the display mode.

## 5. PRINCIPLE OF OPERATION

After turning the power supply on, device ID and software version are showed on the display, next the controller goes to the measurement mode.

### 5.1. MEASUREMENT MODE

In the measure mode, the measurement results, converted over selected characteristic, are displayed on the LED display. The measurement range equal to the nominal range is called: **nominal measurement range**, and the measurement range equal to the extended nominal range is called: **permissible measurement range** (Figure 5.1, 5.2).

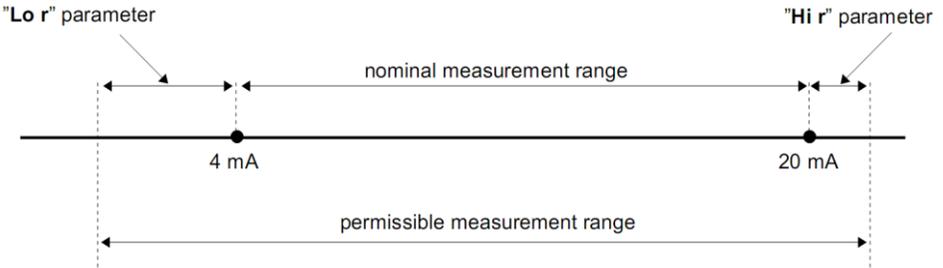


Figure 5.1. Definitions of measurement ranges in mode 4 + 20mA

If the result of measurement exceeds the **permissible measurement range**, warning "-Hi-" or "-Lo-" is displayed rather than input signal, depends on exceeded value (see description of "Lo r" and "Hi r" parameters, paragraph "inPt" menu).

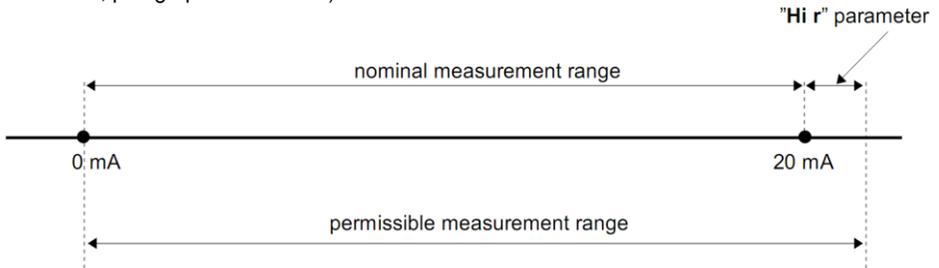


Figure 5.2. Definitions of measurement ranges in mode 0 + 20mA



If the measurement value do not exceeds **permissible measurement range** but displayed value exceeds range -999 ÷ 9999, the warning "-Ov-" is displayed rather than the calculated result.

In the measurement mode user can check main thresholds values. After pressing [**^**] or [**v**] button, name of the threshold (e.g. "rEL1") and his value will be displayed on the display in alternating mode. If [**^**] or [**v**] will be pressed in 5 sec again, the next threshold will be displayed, else the device comes back to the measurement mode. If a **free access** is enabled (see description of "SECu" menu), user can change the value of particular threshold pressing button [**ENTER**] (see: **PARAMETERS EDITION**).


Input type, range of displaying values, characteristic of conversion, decimal point position and measure filtering ratio, are user configurable parameters. All accessible parameters can be changed by entering the menu (see: **DEVICE PROGRAMMING**). Use the local keyboard or the remote controller to do it. (Note: all parameters can be remote changed via RS-485 interface).

 Configurations of the device (via menu or RS-485 interface) **do not stop measures.**

**5.2. DETECTION OF THE PEAK VALUES**

The **PMS-620N** controller is equipped with peaks detection function. It can detect peaks of the input signal and display their values. Presets connected with this function are placed in "HOLD" menu (see description of "HOLD" menu). The detection of the peak can be done if the measured signal raises and drops of value at least equal to parameter "PEA". Detected peaks are displayed during the time defined by parameter "timE". If a new peak will be detected while one is displayed, this new peak will be displayed and display time counter will be cleared (Figure 5.3). If no peaks are detected while time "timE" elapses, device starts to show the current value of input signal again. If „HdiS“="HOLD" then setting parameter "timE"=0.0 causes holding peak value until [**ESC**] button is pressed. If „HdiS“="rREAL" then value "timE"=0.0 means no holding. Displaying peak value is signalized by flashing most right decimal point.

The relays/LEDs can be controlled depend on the current value of input signal or the peak value (see "HOLD" menu).

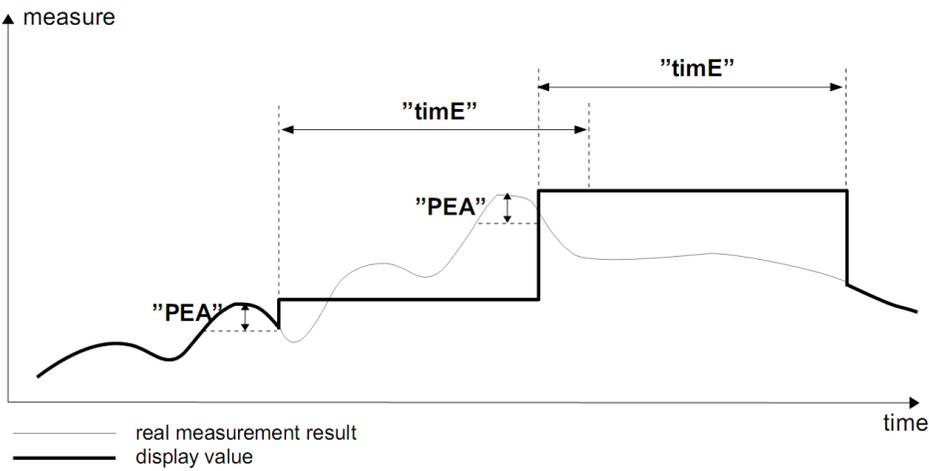

*Figure 5.3. Process of peaks detection*

### 5.3. CONTROL OF THE RELAY OUTPUTS

The control of the object (measured signal) is realized via relay outputs. Front panel LEDs named „R” indicates the state of particular relay output.

**i** If device is not equipped with one or more relay outputs, menus refer to this relays are available, but apply to LED indicators only. In such case LEDs indicates exceeding of particular thresholds.

Modes of the control can be changed depend on the values of parameters “SEtP”, “SEt2”, “HYSt”, “modE”, “t on”, “toFF”, “unit” and “AL”. Depend on “modE” parameter, relays can be not used or controlled over one or two thresholds values.

If one threshold is used (Figure 5.4) the relay can be turned on (“modE” = “on”) or off (“modE” = “oFF”) when the input signal value is contained in **zone A**. If two thresholds are used (Figure 5.5) the relay will be turned on when value of input signal is contained in **zone A** (“modE” = “in”) or **zone B** (“modE” = “out”) and turned off if the signal is contained in the second one.

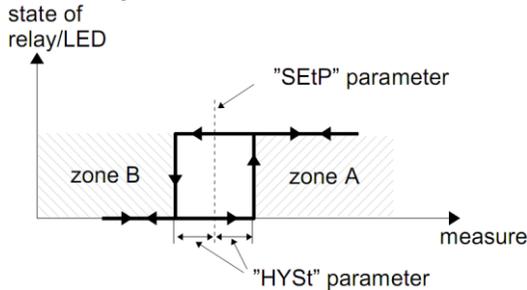


Figure 5.4. One threshold control of the relay/LED outputs


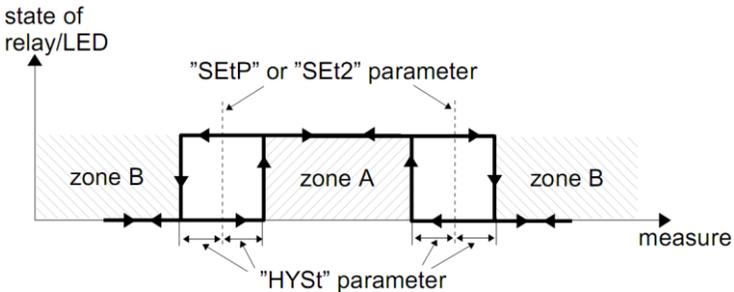


Figure 5.5. Two threshold control of the relay/LED outputs

**i** The relay outputs and LEDs (named R) can be controlled depend on both – the current value and the peak value (when peak detection is active) of the input signal.

### 5.3.1. One threshold mode

Figure 5.6 presents the principle of relay outputs operation for one threshold mode, and example values of other parameters.

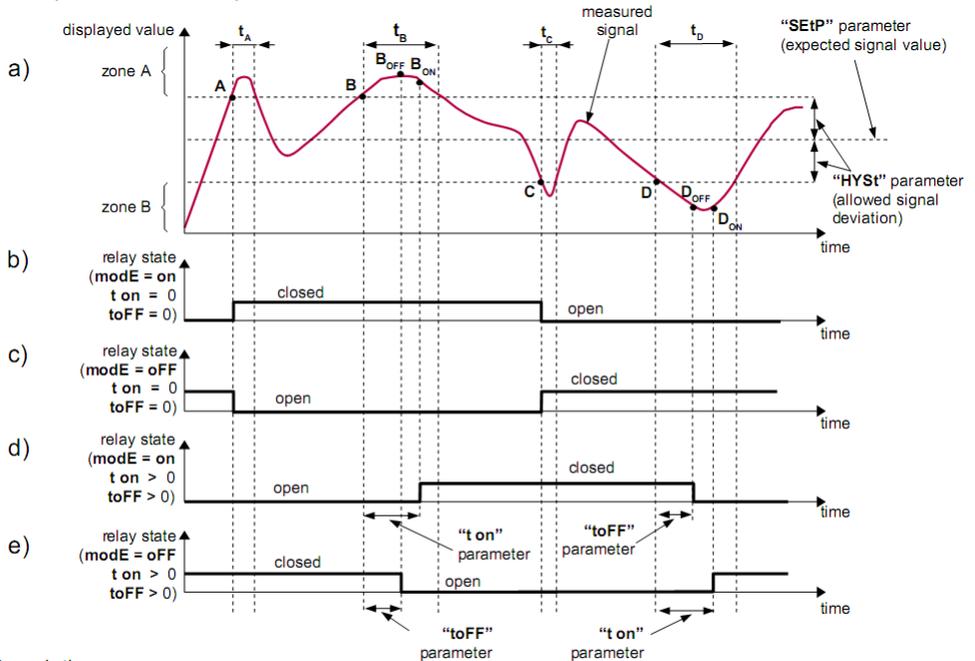

Description:

A, B, C, D - points where measured signal exceeds border values (expected value  $\pm$  allowed deviation)

B<sub>ON</sub>, B<sub>OFF</sub>, D<sub>ON</sub>, D<sub>OFF</sub> - relays state changes moments: (for "t on" > 0, "toFF" > 0)

t<sub>A</sub>, t<sub>B</sub>, t<sub>C</sub>, t<sub>D</sub> - time periods while input signal is in zone A or zone B

Figure 5.6. Principle of LED/relay output operation for one threshold mode

Parameter "SEtP" sets a threshold of the relay, and parameter "HYSt" sets a **hysteresis** of the relay (Figure 5.6 a). The relay can change his state **only** when input value exceeds (over or under) **border value** and t<sub>A</sub>, t<sub>B</sub>, t<sub>C</sub>, t<sub>D</sub> times (Figure 5.6) are bigger than the time defined by parameters "t on", "toFF" and "unit". **Border values** means values equal **threshold+hysteresis** and **threshold-hysteresis** respectively.

If "t on" and "toFF" parameters are set to "0", then the relay state will be changed **as soon** as input value exceeds any of the **border values** (see points A and C, Figure 5.6 a, b, c).

If values of "t on" or/and "toFF" are positive, then relay state will be turned on if the input value exceeds the **border values** and stay bigger (or lower) during at least "t on" (see points B<sub>ON</sub>, D<sub>ON</sub>, Figure 5.6 a, d, e). Similarly, the relay will be turned off if time "toFF" elapse since the input signal value exceeds any of the **border values** (see points B<sub>OFF</sub>, D<sub>OFF</sub>, Figure 5.6 a, d, e).


If t<sub>A</sub>, t<sub>B</sub>, t<sub>C</sub> or t<sub>D</sub> (when input signal stay in **zone A** or **zone B**) are lower than parameters "t on" or "toFF", the relay will not change his state (see points A and C, Figure 5.6 a, d, e).

The state of relay output while the input value exceeds the **border values** (points A, B, C, D) is described by parameter "modE". The relay can be turned on ("modE" = "on"), or turned off ("modE" = "oFF") when input signal value is contained in **zone A** (Figure 5.6 a).

The parameter "AL" allow user to set the relay output behaviour in critical situations (e.g. input values exceeds **permissible measurement range**). User can select that the relays will be turned on, turned off, or not changed in critical situations.

All parameters connected with relay outputs are described in paragraph "rEL1" menu.

### 5.3.2. Two thresholds mode

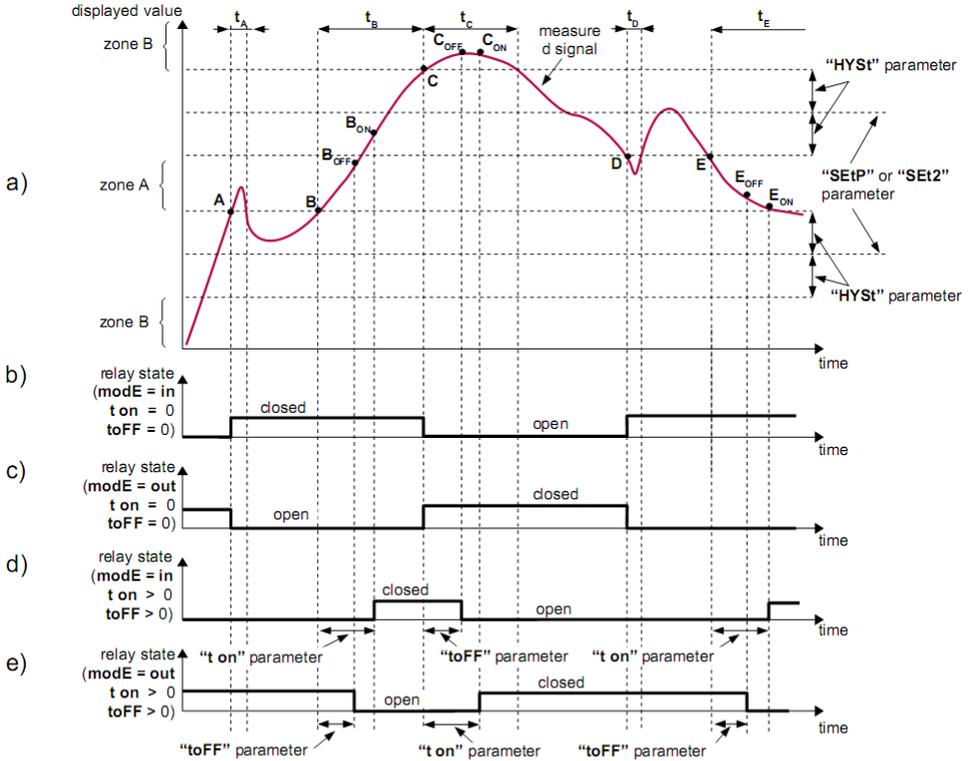

Objasnienie:

**A, B, C, D, E** - points where measured signal exceeds border values (expected value  $\pm$  allowed deviation)

**B<sub>ON</sub>, B<sub>OFF</sub>, C<sub>ON</sub>, C<sub>OFF</sub>, E<sub>ON</sub>, E<sub>OFF</sub>** - relays state changes moments: (for "t on" > 0, "toFF" > 0)

**t<sub>A</sub>, t<sub>B</sub>, t<sub>C</sub>, t<sub>D</sub>, t<sub>E</sub>** - time periods while input signal is in zone A or zone B

Figure 5.7. Principle of LED/relay output operation for two thresholds mode

Figure 5.7 presents the principle of relay outputs operation for two thresholds mode, and an example values of other parameters. In this mode parameter "SEt2" is accessible in common with "SEtP", this parameter describes a second threshold of the relay output. The parameters "HYSt", "modE", "t on", "toFF", "unit" and "AL" are connected with both "SEtP" and "SEt2" thresholds. While the controlling process, the relay output changes his state depends of both "SEtP" and "SEt2" thresholds in similar way as it was described in one threshold mode.

If two threshold mode is used, "modE" parameter defines state of the relay output when the input value occurs in a particular zone defined by border values of both thresholds. The relay can be turned on if the input value is contained in zone A ("modE" = "in") or zone B ("modE" = "out") and turned off if it is contained in the second one (Figure 5.7).



The sequence of thresholds "SEtP" and "SEt2" can be set in any order, due to the control of relay outputs is done depend on difference between thresholds values (zone A) and outside of threshold values (zone B).

## 6. DEVICE PROGRAMMING

The device menu allow user to set all parameters connected to operation of measurement input, control modes, critical situations behaviour, communication via RS-485 and access settings. The meaning of the particular parameters is described in paragraph **MENU DESCRIPTION**.

Some of the parameters can be accessed without menu entering (quick view mode). After pressing [**^**] or [**v**] button, name of the threshold (e.g. "rEL1") and his value will be displayed on the display in alternating mode. If [**^**] or [**v**] will be pressed in 5 sec again, the next threshold will be displayed, else the device comes back to the measurement mode. If a **free access** is enabled (see description of "SECu" menu), user can change the value of particular threshold pressing button [**ENTER**] (see: **PARAMETERS EDITION**).



If particular parameter has been changed and confirmed in quick view mode, its new value is displayed in alternating mode with parameter name by few seconds. Confirmed changes may be checked or user can switch viewed parameter pressing [**^**] or [**v**] button.

### 6.1. PROGRAMING MENU

To enter main menu (being in the measurement mode) operator must to press and hold at least 2 sec. [**ESC/MENU**] button.

If the user password is defined (see parameter "Scod", menu "SECu"), operator have to enter correct one before proceeding to menu options . Entering of the passwords is similar to the edition of numeric parameters (see: **PARAMETERS EDITION** ), however presently editing digit is showed only on the display, other digits are replaced by "." sign.

After entering of last digit of the password first menu position will be displayed (if the password is correct) or warning "Err" in other case.

#### **Functions of the buttons while sub-menu and parameters choice:**



Selection of sub-menu or parameter for editing. Name of selected item (submenu or parameter) is displayed.



Operation of [**ENTER**] button depend on present menu position:

- if the name of some sub-menu is displayed - enter this sub-menu; name of the first parameter (or next level sub-menu) is displayed;
- if the name of some parameter is displayed - enter the edition of this parameter; present value of the parameter is displayed.



[**ESC/MENU**] button allow user to exit present menu level and goes to upper level menu (or measurement mode).



After about 1 min. since last use of the buttons, device exits the menu mode and returns to the measurement mode (only if no parameters are in editing mode).

### 6.2. PARAMETERS EDITION

To start edition of any parameter user should select name of desired one using [**^**] [**v**] buttons and then press [**ENTER**].

### 6.2.1. Numeric parameters (digit change mode)

Numerical parameters are displayed as decimal numbers. The mode of its new value entering depends on chosen edit method ( see parameter „Edit“).

In mode “by digit” („Edit“=“dig”) pressing one of the keys [^] or [v] causes change of current position (flashing digit) or the sign (+/-). Short pressing of the [ENTER] button causes change of the position (digit).

Press [ENTER] at least 2 seconds to accept the changes, after that question “SEt?” is displayed, and user must to confirm (or cancel) the changes. To conform changes (and store it in EEPROM) press [ENTER] button shortly after “SEt?” is displayed. To cancel the changes press [ESC] button shortly after “SEt?” is displayed. After that device returns to the menu.

### 6.2.2. Numeric parameters (slide change mode)

In “slide change” mode („Edit“=“Slid”), buttons [^] and [v] has different functions.

To increase edited value press (or press and hold) [^] button only, the increasing became quickest as long as button [^] is pressed. To slow down the increasing, button [v] can be used. If [v] is pressed shortly (and button [^] is still pressed), increasing slow down for a moment only, if [v] is pressed and held while button [^] is still pressed the increasing slow down and will be kept on lower speed.

To decrease edited value press (or press and hold) [v] button only. The decreasing became quickest as long as button [v] is pressed. To slow down the decreasing, button [^] can be used. If [^] is pressed shortly (and button [v] is still pressed), decreasing slow down for a moment only, if [^] is pressed and held while button [v] is still pressed the decreasing slow down and will be kept on lower speed.

Press [ENTER] at least 2 seconds to accept the changes, after that question “SEt?” is displayed, and user must to confirm (or cancel) the changes. To conform changes (and store it in EEPROM) press [ENTER] button shortly after “SEt?” is displayed. To cancel the changes press [ESC] button shortly after “SEt?” is displayed. After that device returns to the menu.

### 6.2.3. Switch parameters (“LIST” type)

Switch parameters can be described as sets of values (lists) out of which only one of the options available on the list can be selected for the given parameter. Options of switching parameter are selected using [^], [v] keys.

Short pressing of [ENTER] causes in displaying of the acknowledge question (“SEt?”). If key [ENTER] is pressed again, the changes are accepted, stored in EEPROM end the edition process finished. Pressing the key [ESC] after “SEt?” causes in cancelling of made changes and returning to menu.

#### **Functions of buttons when editing numeric and switching parameters:**



While editing numeric parameter:

- change of current (flashing) digit;
- slide change of value (acceleration, deceleration, direction change).

While editing switch parameter - selection of switch parameter.



If numerical parameter is being edited, a short press of [ENTER] button change edited position. A long press of [ENTER] button (at least 2 sec.) causes of display a “SEt?” ask, which allow user to make sure if change of the parameter value is correct. If switch parameter is being edited, a short press of [ENTER] button causes of display a “SEt?” ask. When [ENTER] button is pressed again (while “SEt?” is displayed) the new value of the parameter is stored in EEPROM memory.



Pressing this button operator can cancel the changes done up to now (if they were not approved by [ENTER] button after the “SEt?” ask) and come back to menu.

## 6.3. MENU DESCRIPTION

“- - - -” - Password checking. If some password different from „0000” is set, then each enter to main menu follows the entering of password. If entered password is correct then first menu position will be displayed else warning “Err”, and unit returns to measurement mode.



Due to problem with direct displaying of “m” letters, they are exchanged with special signs “ $\bar{m}$ ”. However, in user manual letters „m” is used to make it more readable (example: “modE”).

### 6.3.1. “rEL1” menu

This menu allows configuring the operation mode of relays and LEDs marked „R” (e.g. „R1”).

If there are few relay outputs available, then every output has its own configuration menu (e.g. menu „rEL2” for relay (LED) „R2”). Principle of the relays operation is described in paragraph **CONTROL OF THE RELAY OUTPUTS**.



- The relay outputs and LEDs (named **R**) can be controlled depend on both - the current value and the peak value (when peak detection is active) of the input signal.
- If device is not equipped with one or more relay outputs, menus refer to this relays are available, but apply to LED indicators only. In such case LED's indicates exceeding of particular thresholds.

“SEtP” - first threshold of the relay (range -999 ÷ 9999). Negative values can be input by selecting a “-” sign on first digit (to change value use [**^**] and [**v**] buttons). **Threshold is the medium value of relay hysteresis.**

“SEt2” - second threshold of the relay (range -999 ÷ 9999). Negative values can be input by selecting a “-” sign on first digit ( to change value use [**^**] and [**v**] buttons). This threshold is accessible when “modE” parameter is set to „in” or „out” value. **Threshold is the medium value of relay hysteresis.**

“HYSt” - hysteresis of relay (range 0 ÷ 999). Full hysteresis of the relay is equal to 2x “HYSt” parameter. The relay state can change when an input signal is out of **threshold-hysteresis to threshold+hysteresis** zone.



Presented parameters should be set to ensure that “SEtP” + “HYSt”, “SEt2” + “HYSt”, “SEtP” - “HYSt” or “SEt2” - “HYSt” do not exceeds the measure range. Additionally, in two threshold mode (“modE”= „in” or „out”), the hysteresis for both thresholds must not cover each other (in other case relay can't change his state).

“modE” - relay operation mode:

“noAC” - the relay is not active (permanent turned off).

“on” - one threshold mode, the relay is turned **ON** when input signal exceeds **SEtP** + **HYSt** value, and is turned off back when the input signal became lower than **SEtP – HYSt**.

- "oFF"** - one threshold mode, the relay is turned **OFF** when input signal exceeds **SEtP + HYSt** value, and is turned on back when the input signal became lower than **SEtP – HYSt**.
- "in"** - two threshold mode, the relay is turned **ON** when the input signal is bigger than **"lower threshold + HYSt"** and lower than **"bigger threshold – HYSt"**, and turned off when the input signal is contained in the second zone. The **bigger threshold** means bigger one of **"SEtP"** and **"SEt2"** thresholds, the **lower threshold** means lower one of **"SEtP"** and **"SEt2"** thresholds.
- "out"** - two threshold mode, relay is turned **ON** when the input value is bigger than **"bigger threshold + HYSt"** and lower than **"lower threshold – HYSt"**, and turned on when the input signal is contained in the second zone. The **bigger threshold** means bigger one of **"SEtP"** and **"SEt2"** thresholds, the **lower threshold** means lower one of **"SEtP"** and **"SEt2"** thresholds.
- "modb"** - the relay is controlled via RS-485 interface, independently on the input signal.

- **LEDs light when relays are closed**, independently of relays' mode.
- When power supply fail, unit do not store relays state selected by RS-485 interface.



- "t on"** - turn on delay time, the relay is turned on with delay equal **"t on"** if the input value exceeds appropriate **border value** (defined with **threshold** and **hysteresis**), at least **"t on"** time. **"t on"** range 0 ÷ 99.9, defined with 0.1 sec. resolution. Unit of this parameter is set by **"unit"** parameter.
- "toFF"** - turn off delay time, the relay is turned off with delay equal **"toFF"** if the input value exceeds appropriate **border value** (defined with **threshold** and **hysteresis**), at least **"toFF"** time. **"toFF"** range 0 ÷ 99.9, defined with 0.1 sec. resolution. Unit of this parameter is set by **"unit"** parameter.



If time when the input signal exceeds some border value is shorter than **"t on"** or **"toFF"** time, the relay do not change his state (see paragraph: **CONTROL OF THE RELAY OUTPUTS**).

**"unit"** - unit of time for **"t on"** and **"toFF"** parameters. Can be set on one of two values:

- "min"** - minutes;
- "SEC"** - seconds.

**"AL"** - this parameter defines the relay reaction when some critical situations occurs:

- "noCH"** - relay do not change his state;
- "on"** - relay will be turned on;
- "oFF"** - relay will be turned off.

If parameter **"modE"** is set to **"on"**, **"oFF"**, **"in"** or **"Out"** the "critical situation" means that allowable measurement range is exceeded. If parameter **"modE"** is set to **"modb"**, the "critical situation" means communication delay (when no data is received) longer than **"mbtO"** parameter (see description: **"rS"** menu).



- If option **"noCH"** is selected for **"AL"** parameter, behaviour of the relay may depend on **"FiLt"** parameter in some cases. If **"FiLt"** is set to big value and the input signal drops, result value of the measure will change slow, causes of turning on or off relay due to thresholds values. The critical situation is slowly detected, so it is impossible to predict the relay state in that situations.
- If parameter **„AL"** = „on", the relay will be turned on in the critical situations, even if his parameter **"modE"** = **"noAC"**.

### 6.3.2. "inPt" menu

This menu presets the measurement input:

- "tYPE"** - type of the input / sensor. This parameter can be set to values:  
**"0-20"**, **"4-20"** - current inputs.  
**"0-10"**, **"2-10"**, **"0-5"**, **"1-5"** - voltage inputs.  
 Displayed values are defined by parameters **"Lo C"**, **"Hi C"** (or by user defined characteristic points) and parameter **"Pnt"**.
- "CHAR"** - this option presets type of the conversion characteristic, and can be set to:
- |               |               |   |
|---------------|---------------|---|
| <b>"Lin"</b>  | - linear      | } When one of those characteristics is chosen display range is defined by <b>"Lo C"</b> and <b>"Hi C"</b> . |
| <b>"Sqr"</b>  | - square      |   |
| <b>"Sqrt"</b> | - square root |   |
- "USER"** - user defined characteristic. Maximal length 20 points. Every point is defined by user. Adding, Editing and Deleting of points is done by options **„AddP"**, **„EdtP"**, **„dELP"** (**„InPt"** menu) respectively.
- "tn v"** - volume characteristics of a cylindrical tank in the vertical position, determined by parameters: **„t h1"**, **"t h2"**, **„t h3"**, **„t d"**, **„t Sn"**, **„t Sh"** in **„InPt"** menu (see below for details of the parameters),
- "tn h"** - volume characteristics of a cylindrical tank in the horizontal position, determined by parameters: **„t h1"**, **"t h2"**, **„t h3"**, **„t d"**, **„t Sn"**, **„t Sh"** in **„InPt"** menu (see below for details of the parameters).



If user defined characteristic is selected, and if number of defined points is lower than 2 then warning **"Errc"** is displayed in measurement mode.

The process of displayed result calculation is described in details in **DISPLAY VALUES CALCULATION** paragraph.

- "FiLt"** - this parameter sets filtration rate. It can be set to values from 0 (no filtration) to 5 (strongest filtration – time window about 2 sec).
- "Pnt"** - decimal point position. It can be set to one of:  
**"0"**, **"0.0"**, **"0.00"**, **"0.000"**  
 Decimal point position is changed by **[^]**, **[v]** buttons.
- "Lo C"** These parameters describe the values displayed for minimum and maximum input current.  
**"Hi C"** For example, if input type is set to 4-20 mA **"Lo C"** parameter defines the value displayed when input current is equal 4 mA, and **"Hi C"** parameter defines the value displayed for 20 mA of input current. Available range for these parameters: -999 ÷ 9999. Negative values can be set by entering '-' sign on the first position (by use of **[^]**, **[v]** buttons).



If volume characteristics of a cylindrical tank is selected (parameter **"CHAR"** = **"tn v"** or **"CHAR"** = **"tn h"**) the parameters **„Lo C"** and **„Hi C"** are not available.

„t h1”, „t h2”, „t h3”, „t d” - the parameters defining shape of cylindrical tank (Figure 6.1 and Figure 6.2).

a) for the cylindrical tank in the vertical position:

- „t h1” - the height of the bottom part of a tank (in the elliptic paraboloid shape), this parameter has the fixed precision - 2-decimal point;
- „t h2” - the height of the middle part of a tank in the cylindrical shape, this parameter has the fixed precision - 2-decimal point;
- „t h3” - the height of the top part of a tank (in the elliptic paraboloid shape), this parameter has the fixed precision - 2-decimal point;
- „t d” the diameter of the middle part of a tank, this parameter has the fixed precision - 2-decimal point.

b) for the cylindrical tank in the horizontal position:

- „t h1” - the length of the left bottom of a tank (in the elliptic paraboloid shape), this parameter has the fixed precision - 2-decimal point;
- „t h2” - the length of the middle part of a tank in the cylindrical shape, this parameter has the fixed precision - 2-decimal point;
- „t h3” - the length of the right bottom of a tank (in the elliptic paraboloid shape), this parameter has the fixed precision - 2-decimal point;
- „t d” - the diameter of the middle part of a tank, this parameter has the fixed precision - 2-decimal point.
- „t Sn”, „t Sh” - parameters defining the length and position of the sensor used to measure level of liquids, gases or solids in the tank (Figure 6.1, 6.2).
- „t Sn” - distance between end of the sensor and bottom of the tank, this parameter has the fixed precision 2-decimal point but the unit is 100times smaller than “t Sh” (see Info below);
- „t Sh” - the length of the sensor this parameter has the fixed precision - 2-decimal point.

- The unit value of “t Sn” parameter is 100-fold less than the unit value of other parameters defining cylindrical tank, i.e. if we set value 10.00 in “t Sh” parameter and set value 08.00 in “t Sn” parameter this mean that value of “t Sn” parameter is real has 00.08 value in preserved unit of the “t Sh” parameter.
- If we set parameters of tank in [m] unit (“t Sn” parameter takes [cm] unit respectively, see above), than displays the result the volume of the tank in [cm<sup>3</sup>] unit, if we set parameters of tank in [cm] unit (“t Sn” parameter takes [mm] unit respectively, see above), than displays the result the volume of the tank in [cm<sup>3</sup>] unit.
- “t Sh” parameter may be greater than height (for vertical position) or diameter (for horizontal position) of the tank, which means that the total volume of the tank can be achieved by e.g. such middle-current range.
- If the measurement value do not exceeds permissible measurement range but displayed value exceeds range of 9999 than you can move to the right position of the decimal point if it is still possible (see parameter Menu->“inPt”->“Pnt”).
- If in the volume characteristics of a cylindrical tank is exceeded the value of the volume of the tank sets by parameters available in menu “inPt” instead of the calculated result will be display warning “-Hi-”.

i

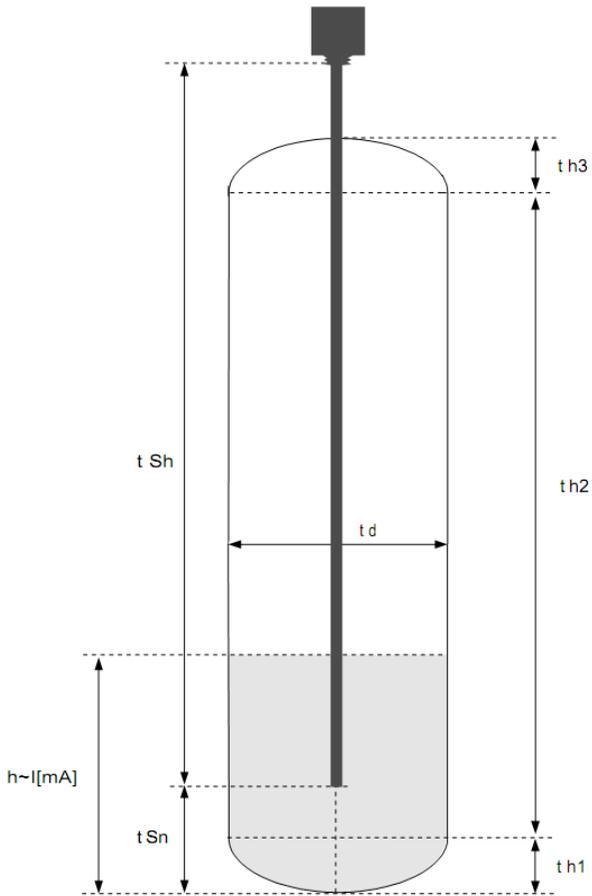


Figure 6.1. Parameters of cylindrical tank in vertical position

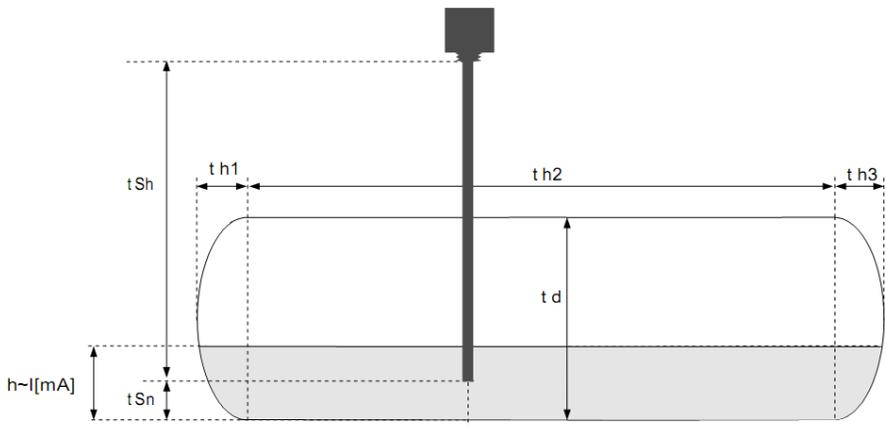


Figure 6.2. Parameters of cylindrical tank in horizontal position



If user defined characteristic is selected (parameter “**CHAR**” = “**USER**”) the parameters „**Lo C**” and „**Hi C**” are not available for modification, due to their values are calculated from defined characteristic.

“**AddP**”

- this menu allow user to add single point to the user defined characteristic. After selection of this option device waits for „**X**” and „**Y**” coordinates of new point. Modification of the coordinates is done accordingly to numerical parameters edition. Coordinate „**X**” defines the percentage ratio of input current to selected current range. The „**X**” range: -99,9 ÷ 199,9. Coordinate „**Y**” defines displayed value for particular „**X**” value. The „**Y**” value can be changed in range: -999 ÷ 9999, decimal point position depends on „**Pnt**” parameter (menu “**inPt**”).

- User cannot enter two points with the same value of „**X**” coordinate. If user trays to do it, “**Err**” warning is displayed. To modify any defined point use “**EdtP**” option.
- To distinguish „**X**” and „**Y**” coordinates, if „**X**” coordinate is displayed an additional decimal point on utmost right position is displayed.
- If user defined characteristic is selected, and if number of defined points is lower than 2 then warning “**Errc**” is displayed in measurement mode.



“**dELP**”

- this option allows user to delete any of the points of the user defined characteristic. After selection current number of points of the user defined characteristic is displayed for about approx. 1.5 sec. After that device waits for selection of point being deleted (by [**^**], [**v**] buttons). The short pressing of [**ENTER**] button causes by switching between **X** and **Y** value of the displayed point. The long press (press and hold at least 2 sec) of [**ENTER**] button causes by displaying „**dEL?**” ask. If [**ENTER**] button is pressed again, current point is deleted and new updated number of points of the user defined characteristic is displayed.

“**EdtP**”

- this option allows user to modify of particular point of the user defined characteristic. After selection current number of points of the user defined characteristic is displayed for about approx. 1.5 sec. After that device waits for selection of point being edited (by [**^**], [**v**] buttons). The short pressing of [**ENTER**] button causes by switching between **X** and **Y** value of the displayed point. The long press (press and hold at least 2 sec) of [**ENTER**] button causes by entering to edit the selected coordinate of the point. Modification of the coordinates is done accordingly to numerical parameters edition.



“**AddP**”, “**dELP**” and “**EdtP**” options are available only if the user defined characteristic is used (it means when parameter “**CHAR**” = “**USER**”).

“**Lo r**”,  
“**Hi r**”

- these parameters define the expansion of nominal range in percent. They determine the permissible range of input signal (Figure 6.3).

The permissible range allow user to exceed the **nominal range** of input signal. If input value is contained in the permissible range a proper result is displayed. If input signal exceeds this range (defined by “**Lo r**” and “**Hi r**”), “**-Lo-**” or “**-Hi-**” warning is displayed depend on input signal value.

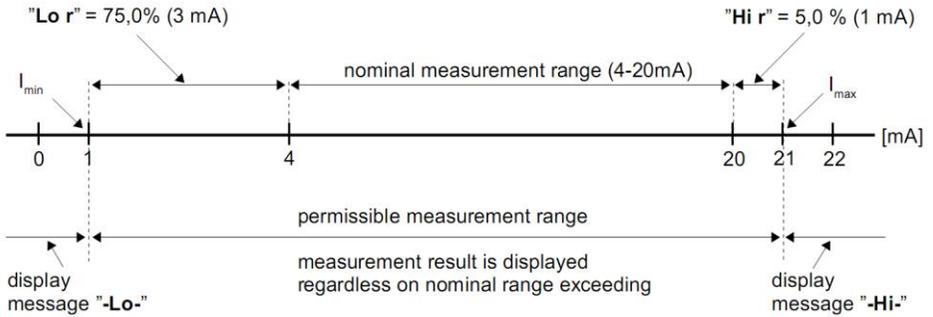


Figure 6.3 Example of definition of permissible range of input signal - "Lo r" and "Hi r" parameters ("4-20" mode)

The "Lo r" parameter is important if input is set to "4-20", "1-5" or "2-10" mode only, and determines lower border of the permissible range. If input is set to "0-20", "0-5" or "0-10" mode then lower border of the permissible range is always 0.

For example if input is set to "4-20" mode, then lower border is calculated due to expression:  $I_{min} = 4 \text{ mA} - 4 \text{ mA} \times \text{"Lo r"} \%$ .

The "Lo r" value can be set from 0 to 99.9%.

Parameter "Hi r" determines the upper border of the permissible range accordingly to the expression (for all modes).

For example if input is set to "4-20" mode, then upper border is calculated due to expression:  $I_{max} = 20 \text{ mA} + 20 \text{ mA} \times \text{"Hi r"} \%$ . The value of "Hi r" can be set from 0 to 19.9%.

In example no 1 of the **DISPLAY VALUES CALCULATION** paragraph the procedure of the permissible input range determining is presented in details.



If the measurement value do not exceeds **permissible measurement range** but displayed value exceeds range -999 ÷ 9999, the warning "-Ov-" is displayed rather than the calculated result.

### 6.3.3. "bri" parameter

This parameter allows user to set bright of the LED display, bright can be set to conventional values from 1 to 8.

### 6.3.4. "HOLD" menu

This menu contains parameters connected with peak detection function. See also full description of the peak detection function in paragraph: **DETECTION OF THE PEAK VALUES**.

"modE" - the type of detected changes of the input signal, can be set to values:

"norm" - peaks, peak and next drop of the input signal of value equal at least "PEA";

"inv" - drops, drop and next peak of the input signal of value equal at least "PEA".

"PEA" - minimal detected signal change classified as peak or drop (see Figure 5.3)

**"time"** - maximum time of displaying of the peak (drop) value, can be set from 0.0 to 19.9 sec, with 0.1 sec. resolution. If „HdiS“=“HOLD” then setting parameter **"time"=0.0** causes holding peak value until [ESC] button is pressed. If „HdiS“=“rREAL” then value **"time"=0.0** means no holding.

**"HdiS"** - type of displayed values:  
**"rREAL"** - current value is displayed;  
**"HOLD"** - peak (drop) value is displayed.

**"H r1", "H r2"** - relay/LED outputs ( R1, R2) operation mode:  
**"rREAL"** - relay/LED operates depend on the current value;  
**"HOLD"** - relay/LED operates depend on the peak (drop) value.

### **6.3.5. "SECu" menu**

This menu contains presets connected with availability of other parameters:

**"Scod"** - user password (4-digits number). If this parameter is set at value "0000", user password is turned off.

**If the user do not remember his password, the access to the menu is possible by the "one-use password". To get this password please contact with Marketing Division. "Single use password" can be used only one time, after that it is destroyed. Entering this password causes in clearing of user password, it means sets the user password to „0000”.**



The "one-use password" can be used **ONE TIME ONLY**, it is impossible to use it again! The "one-use password" can be restored by Service Division only.

**"A r1, A r2"** - this option permits user ("on") or prohibits ("oFF") to modify the thresholds of the relays/LEDs R1, R2 without knowledge about user password.

### **6.3.6. "rS" menu**

This menu is connected with RS-485 interface, and sets his properties:

**"Addr"** - this parameter defines the address of the device, accordingly to Modbus protocol. It can be set in range from 0 to 199. If the value 0 is set then device, responds to frames with address 255 (FFh).

**"bAud"** - this parameter determines RS-485 interface baud rate. It can be set to one of 8 possible values: **"1.2", "2.4", "4.8", "9.6", "19.2", "38.4", "57.6", "115.2"**, which respond to the baud rates of 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200 bit/s respectively.

**"mbAc"** - this parameter sets the access to the configuration registers of the device.  
Possible values:  
**"on"** - configuration registers can be set via RS-485 interface;  
**"oFF"** - configuration registers cannot be set via RS-485 interface.



The access to registers no 04h and 05h can't be denied by "mbAc" parameter (see: **LIST OF REGISTERS**).

**„mbtO"** - this parameter defines maximal time (sec) between following frames received by the device. If the delay will be greater than the value of "mbtO" parameter, the relays which are controlled via RS-485 interface, will set to alert state (see "rEL1" menu description). Parameter "mbtO" can be set to values from 0 to 99 seconds. The value 0 means that the time will be not controlled.

**"rESP"** - this parameter defines minimal (additional) delay between the Modbus message and the answer of the device (received and sent via RS-485 interface). This additional delay allows the device to work with poor RS-converters which do not work properly on baud rates higher than 19200. This parameter can be set to one of values:

- "Std" - answer as quick as possible, no additional delay
- " 10c" } - answer delayed of 10, 20, 50, 100 of 200 chars respectively, where one character time depends on selected baud rate
- " 20c" }
- " 50c" }
- "100c" }
- "200c" }



In the most cases parameter "rESP" should be set to "Std" (no additional delay). Unfortunately for some third party RS-converters "rESP" should be adjusted experimentally. Table 6.1 contains most frequently used values.

<b>"bAud" parameter</b>	"38.4"	"57.6"	"115.2"
<b>"rESP" parameter</b>	" 10c"	" 20c"	" 50c"

Tab.6.1. Settings of "rESP" parameter

### **6.3.7. "Edit" parameter**

This parameter allows to change the edition mode of numerical parameters:

- "dig"** - the change to "by digit" mode;
- "Slid"** - slide change mode.


### **6.3.8. "dEFS" parameter**


This setting allows to restore the factory settings of the device. To get the access to this option special password is required: „5465", next the device displays acknowledge question „SEt?". Press [ENTER] to acknowledge the restoring of factory settings or [ESC] to cancel.

### **6.3.9. "SErv" menu**

This setting allows to restore the factory settings of the device. To get the access to this option special password is required: „5465", next the device displays acknowledge question „SEt?". Press [ENTER] to acknowledge the restoring of factory settings or [ESC] to cancel.

# 6.4. MENU STRUCTURE

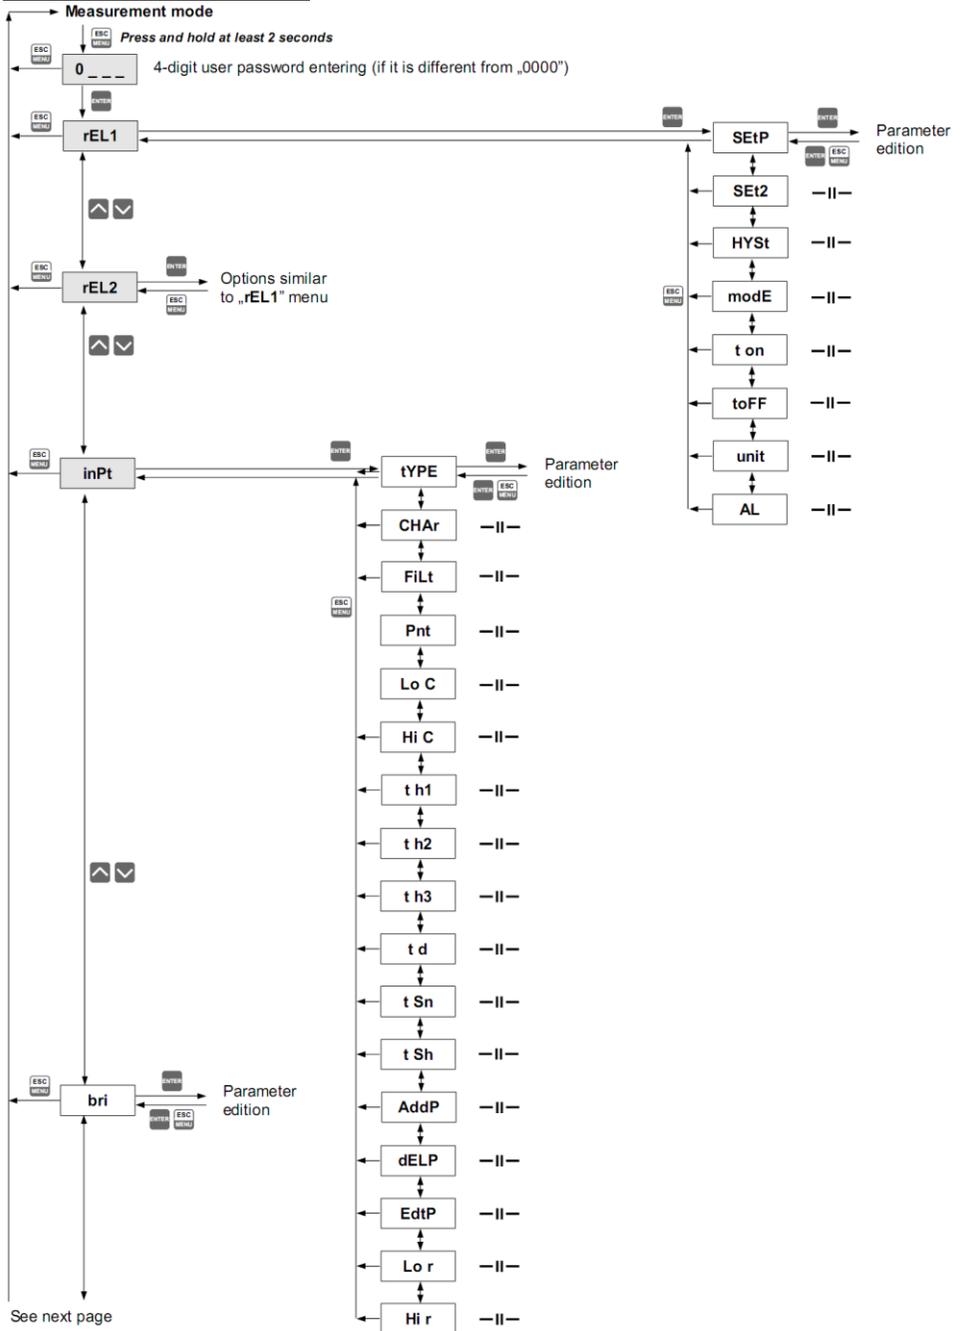

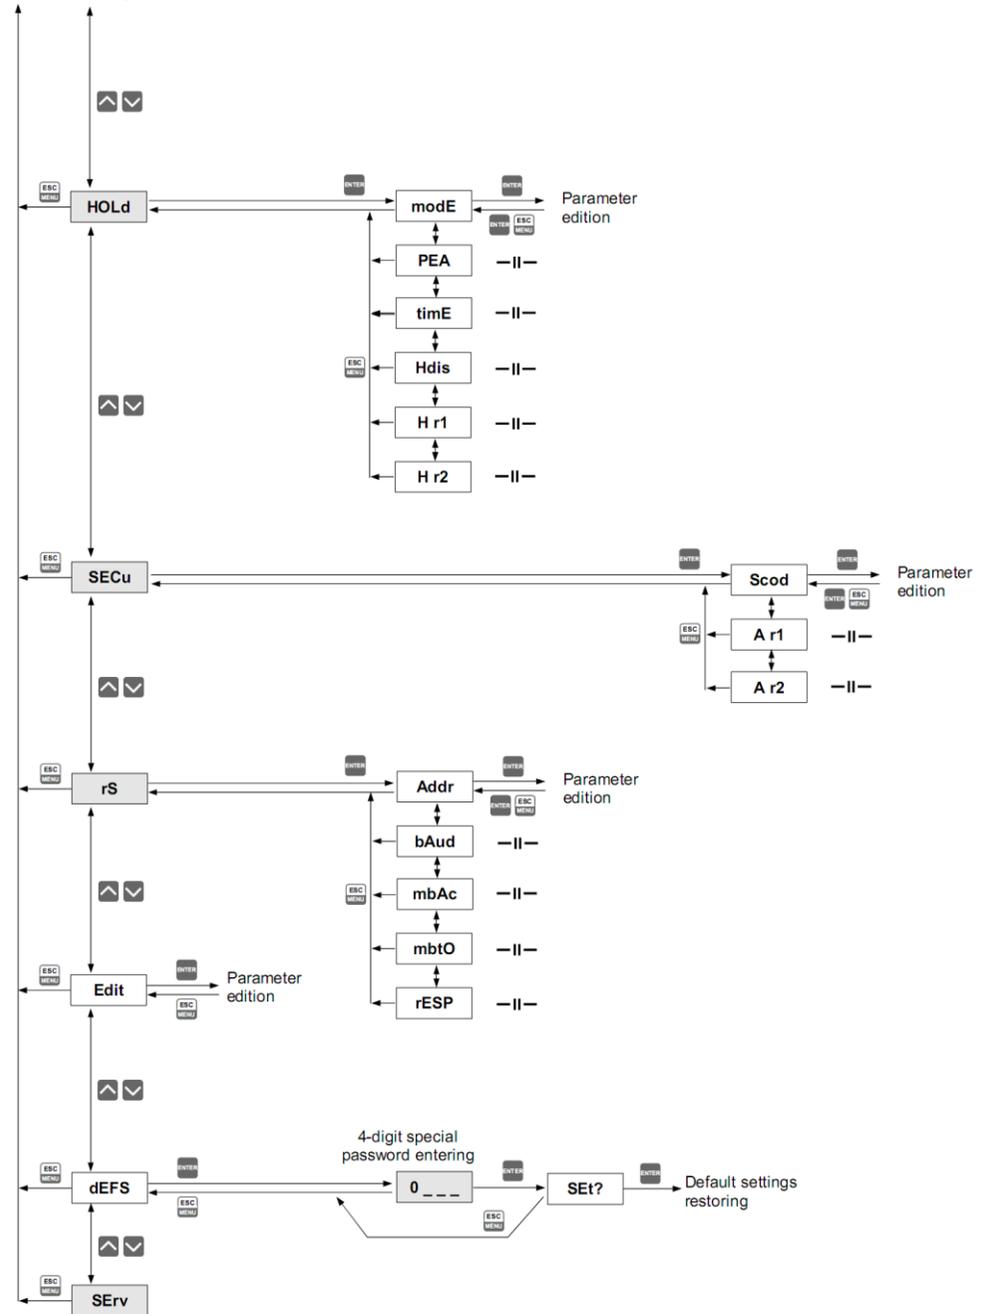

## 7. THE ALARM LED

The ALARM LED (AL) is turned on when input signal is out of the permissible input range. See parameters: "tyPE", "Lo r" and "Hi r" in paragraph „InPt" menu.

## 8. OVER CURRENT PROTECTION

The current input of the device is equipped with over-current protection circuit. This circuit protects the standard resistor against damage. Maximum input current is set to 40mA (typical).

When temperature of the standard resistor falls, the protection circuit will turn on automatically, and the device will measure the input current again. Due to thermal phenomenon in the standard resistor, precision of the measurement may be lower until to the standard resistor temperature will falls to the environment temperature.

## 9. DISPLAYED VALUES CALCULATION

For simplicity of examples it's assumed that current input is selected, and all calculations are related to this input. When voltage input is selected calculations are similar (be sure of particular ranges and units).

The first step to compute the result of measure is the calculation of the normalized result (it means result of 0-1 range). To do it, the begin of the input range (0 mA for 0-20mA range, and 4mA for 4-20mA range) must be subtracted from measured value. Next, received result must be divided by the width of the input range (it means 20mA for 0-20mA range, and 16mA for 4-20mA range). So normalized result can be expressed by expressions:

$$I_n = \frac{I_{inp.} - 4}{16} \quad \text{for } 4 \div 20\text{mA range}$$

$$I_n = \frac{I_{inp.}}{20} \quad \text{for } 0 \div 20\text{mA range}$$

where  $I_{inp.}$  Means input current (in mA), and  $I_n$  – normalized result.

i If measured value exceeds the nominal input range (0-20mA or 4-20mA), and do not exceed the permissible input range, then received normalized  $I_n$  result exceeds 0-1 range, e.g. input range 4-20 mA, input current = 3 mA – the normalized result is equal -0,0625, and for input current = 22 mA, the normalized result is equal 1,125. In such cases presented expressions are still correct.

### 9.1. ADDITIONAL CALCULATIONS (USED CONVERSION CHARACTERISTIC)

The manner of the additional computation of the displayed result depends on selected conversion characteristic. All presented charts are connected with the input range 4 - 20 mA.

### 9.1.1. Linear characteristic

The normalized result is converted by fixed coefficients determined by "Lo C" and "Hi C" parameters (when the normalized results is equal 0, then value "Lo C" is displayed, and when the normalized results is equal 1, then value "Hi C" is displayed). Expression presented below shows the manner of result calculation:

$$W = I_n \times ("Hi C" - "Lo C") + "Lo C",$$

where **W** means the displayed value.



The value of the "Lo C" parameter can be higher than the value of "Hi C" parameter. In such a case, for an increasing value of input current the displayed value decreases.

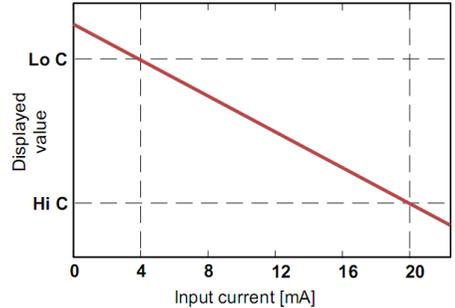
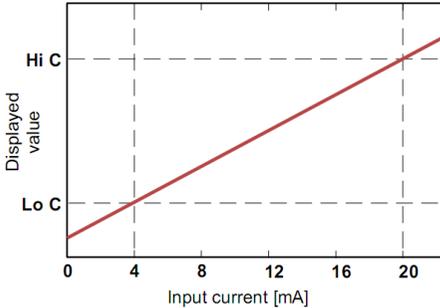


Figure 9.1 Normal („Lo C” < ”Hi C”) and inverted („Lo C” > ”Hi C”) characteristic

### 9.1.2. Square characteristic

The normalized result is squared and further conversion is done as for linear characteristic. Conversion is made accordingly with the expression:

$$W = I_n^2 \times ("Hi C" - "Lo C") + "Lo C",$$

where **W** means the displayed value.

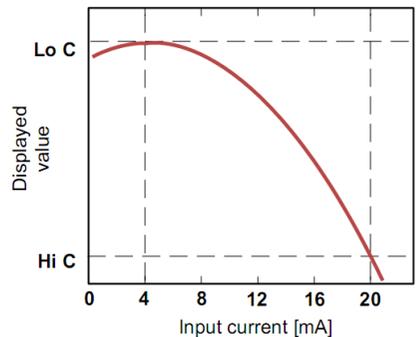
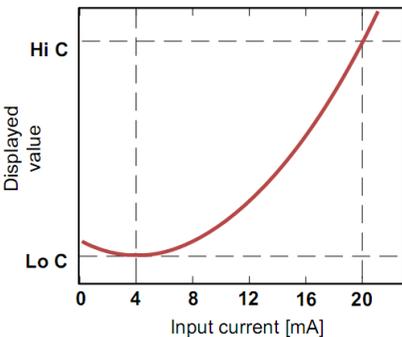


Figure 9.2 Normal („Lo C” < ”Hi C”) and inverted („Lo C” > ”Hi C”) characteristic

### 9.1.3. Square root characteristic

The normalized result is rooted and further conversion is done as for linear characteristic. Conversion is made accordingly with the expression:

$$W = \sqrt{I_n} \times ("Hi C" - "Lo C") + "Lo C",$$

where **W** means the displayed value.



Shown above expression is not valid when normalized result is negative. It is possible for 4-20 mode only. In this case ( $I_n < 0$ ) the displayed result is equal **"Lo C"** (see graphs below).

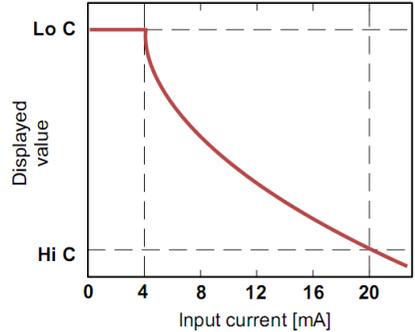
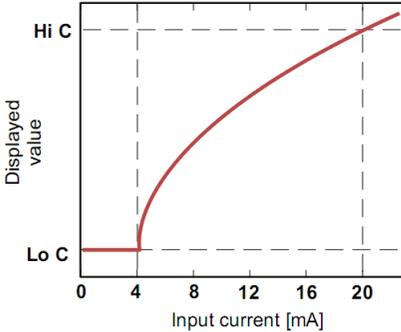


Figure 9.3 Normal („Lo C” < ”Hi C”) and inverted („Lo C” > ”Hi C”) characteristic

### 9.1.4. User defined characteristic

User defined characteristic is defined as set of X-Y points. Number of the points is variable and may be set from 2 to 20 points which make linear segments (see graph and see **Menu "inPt"**). Due to the normalized result  $I_n$ , the device computes specific segment, e.g. for characteristic from figure below, and  $I_n = 0.65$  the segment between points  $X = "50.0."$  and  $X = "70.0."$  will be chosen.

Let's mark those points as PL (point low) and PH (point high) - in this example PL = "50.0." and PH = "70.0.", and the normalized result  $I_n$  for the point PL as  $I_p$  (in this example  $I_p = I_n(PL) = 0.5$ ). The displayed result is calculated accordingly to the expression:

$$W = (I_n - I_p) \times \frac{[Y(PH) - Y(PL)]}{[X(PH) - X(PL)]} \times 100 + Y(PL)$$

where Y(PH), X(PH), Y(PL), X(PL) mean values of X and Y coordinates of PH and PL points.



If the normalized result exceeds the user defined characteristic values, then specific utmost segment, defined by two next points, is used for calculations. If characteristic from figure below is used, and if  $I_n > 1$  then segment defined by points  $X(PL) = "90.0."$ ,  $X(PH) = "100.0."$  will be used.

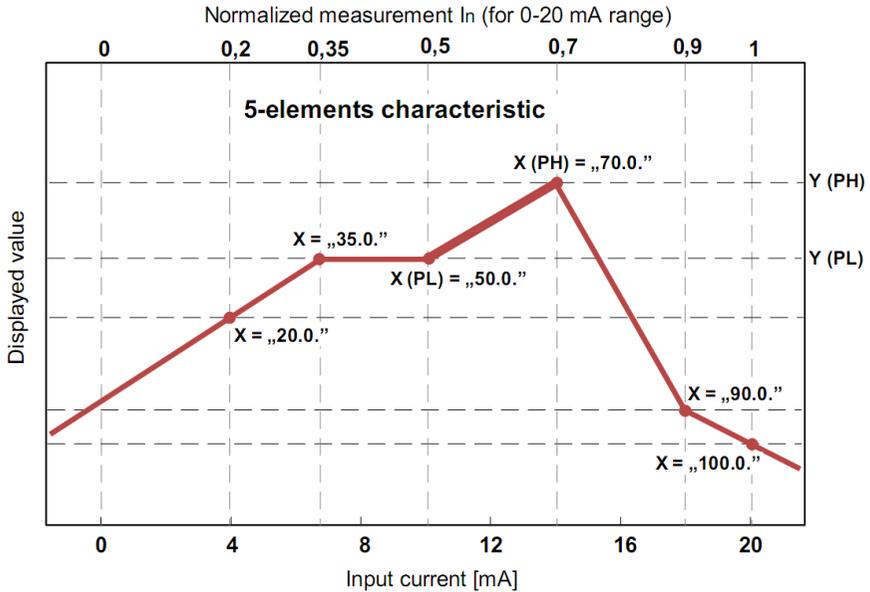


Figure 9.4 Example of user defined characteristic

### 9.1.5. Volume characteristic of a cylindrical tank

Volume characteristics of a cylindrical tank are defined by parameters of tank (see menu "inPt"). Normalized input is proportional to level 'h' and linear scaling by parameters: "t Sn", "t Sh" (for normalized input value equal 0, displays value "t Sn" and for normalized input value equal 1, displays value "t Sh"+"t Sn" (Figure 9.5).

The linear scaling can be expressed as follow:

$$h = I_n \cdot "t Sh" + "t Sn"$$

where 'h' is level of liquids, gases or solids in the tank, see Figure 6.1, 6.2.

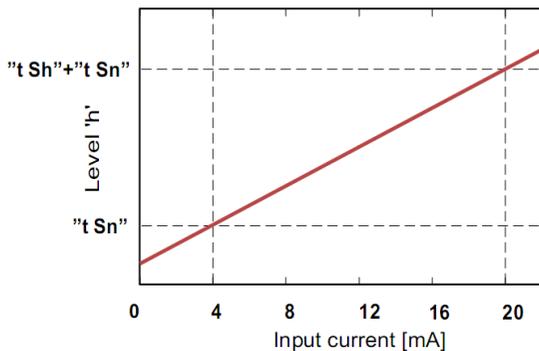


Figure 9.5 The characteristic of level of liquids, gases or solids in tank depending on input current in 4÷20mA range.

Volume of tank can be write by general formula:

$$V = \int Pp \cdot dh$$

Possible combination of tank shape for calculation the volume:

cylindrical tank in vertical position							
cylindrical tank in horizontal position							
parameters setting (for vertical and horizontal position of tank)	t h2=0 t h3=0	t h3=0	t h2=0	t h1=0 t h3=0	-	t h1=0	t h1=0 t h2=0

## 9.2. EXAMPLES OF CALCULATIONS

### **Example 1: Selection of the permissible input range (“4-20” mode)**

If in “4-20” mode the user sets “Lo r” = 20.0% and “Hi r” = 10.0%, then permissible input currents range will be equal: 3.2 mA + 22 mA. Lower border of the range is the result of calculations: 4 mA - 4 mA × 20%, and the higher : 20 mA + 20 mA × 10%.

### **Example 2: The normalized In result calculation**

Let the input mode = 4-20 mA. The normalized In result is calculated accordingly to the expression on page 37, so if  $I_{in} = 10$  mA then  $10 \text{ mA} - 4 \text{ mA} = 6 \text{ mA}$ , and this result should be divided by the width of input range (16 mA). Finally the normalized result:  $I_n = 6/16 = 0,375$ .

In case when input current exceeds nominal measurement range, calculations are similar. For example if input current is equal 2,5 mA then  $I_n = (2,5 - 4)/16 @ -0,0938$ , and if input current is equal 20,5 mA then  $I_n = (20,5 - 4)/16 @ 1,0313$ .

### **Example 3: The linear characteristic**

Let the input mode = 4-20 mA, and parameters “Lo C” and “Hi C” equal to -300 and 1200 respectively. The calculations will be done for three different input currents from example 2.

a)  $I_{in} = 10$  mA and  $I_n = 0,375$

Accordingly to expression on page 38 for linear characteristic:

$0,375 \times [1200 - (-300)] \approx 562$  and next, the “Lo C” value is added to the result, so the displayed value:

$$W \approx 562 + (-300) = 262$$

b)  $I_{in} = 2,5$  mA and  $I_n = -0,0938$

$$W \approx -441$$

c)  $I_{in} = 20,5$  mA and  $I_n = 1,0313$

$$W \approx 1247$$

#### **Example 4: The square characteristic**

Let the input mode = 4-20 mA, and parameters “Lo C” and “Hi C” equal to -300 and 1200 respectively. The calculations will be done for their different input currents from example 2.

a)  $I_{in} = 10 \text{ mA}$  and  $I_n = 0,375$

Accordingly to expression on page 38 for square characteristic:  $(0,375)^2 \times [1200 - (-300)] \approx 211$ .  
At next, the “Lo C” value is added to the result , so the displayed value:

$$W \approx 211 + (-300) = -89$$

b)  $I_{in} = 2,5 \text{ mA}$  and  $I_n = -0,0938$

$$W \approx -287$$

c)  $I_{in} = 20,5 \text{ mA}$  and  $I_n = 1,0313$

$$W \approx 1295$$

#### **Example 5: The square root characteristic**

Let the input mode = 4-20 mA, and parameters “Lo C” and “Hi C” equal to -300 and 1200 respectively. The calculations will be done for their different input currents from example 2.

a)  $I_{in} = 10 \text{ mA}$  and  $I_n = 0,375$

Accordingly to expression on page 39 for square root characteristic:

$$\sqrt{0,375 \times [1200 - (-300)]} \approx 919$$

and next, the “Lo C” value is added to the result , so the displayed value:

$$W \approx 919 + (-300) = 619$$

b)  $I_{in} = 2,5 \text{ mA}$  and  $I_n = -0,0938$ , normalized result is negative, so the displayed value is equal to “Lo C” parameter:

$$W \approx \text{“Lo C”} = -300$$

c)  $I_{in} = 20,5 \text{ mA}$  and  $I_n = 1,0313$

$$W \approx 1223$$

#### **Example 6: The user defined characteristic**

Let the input mode = 4-20 mA, and the user selected the 10 segment characteristic. To do this it is necessary to enter X and Y coordinates of 11 points (see **Menu “inPt”**).

The calculations will be done for three different input currents from example 2, so in calculations some of the segments will be used only.

Let the following points will be given:

$$X1 = \text{“00.0”}, Y1 = \text{“-50.0”},$$

$$X2 = \text{“10.0”}, Y2 = \text{“-30.0”},$$

....

$$X6 = \text{“30.0”}, Y6 = \text{“30.0”},$$

$$X7 = \text{“40.0”}, Y7 = \text{“80.0”},$$

....

$$X10 = \text{“90.0”}, Y10 = \text{“900.0”},$$

$$X11 = \text{“100.0”}, Y11 = \text{“820.0”},$$

Additionally all other points must to be defined and stored in the device memory.

a)  $I_{in} = 10 \text{ mA}$  and  $I_n = 0,375$

The segment defined by  $X6 = \text{"30.0."}$  and  $X7 = \text{"40.0."}$  for this  $I_n$  will be selected. Accordingly to expressions given for user defined characteristic (see page 39)  $X6(PL) = 30$ ,  $Y6(PL) = 30$ ,  $X7(PH) = 40$ ,  $Y7(PH) = 80$  and  $I_p = 0,3$ , the displayed value:

$$W = (I_n - I_p) \times \frac{[Y(PH) - Y(PL)]}{[X(PH) - X(PL)]} \times 100 + Y(PL) =$$

$$= (0,375 - 0,3) \times \frac{[80 - 30]}{[40 - 30]} \times 100 + 30 \simeq 67$$

b)  $I_{in} = 2,5 \text{ mA}$  and  $I_n = -0,0938$ , because of the normalized  $I_n$  value is lower than 0, the segment defined by  $X1$  and  $X2$  will be selected.  $X1(PL) = 0$ ,  $Y1(PL) = -50$ ,  $X2(PH) = 10$ ,  $Y2(PH) = -30$  and  $I_p = 0$ . For these values the displayed value  $W \approx -69$ .

c)  $I_{in} = 20,5 \text{ mA}$  and  $I_n = 1,0313$ , because of the normalized  $I_n$  value is higher than 1, the segment defined by  $X10$  and  $X11$  will be selected, and  $X10(PL) = 90$ ,  $Y10(PL) = 900$ ,  $X11(PH) = 100$ ,  $Y11(PH) = 820$  and  $I_p = 0,9$  for these values the displayed value  $W \approx 795$ .

**Example 7: Volume characteristics of a cylindrical tank in the vertical position**

We assume that the user has oil tank in the shape of the cylinder located in vertical position. The tank has dimension: height 10m, diameter 4m and length of the sensor 10m. The output of signal of the sensor has 4÷20mA range.

In first step, we set type of input range 4÷20mA (see parameter MENU->"InPt"->"tYPE").

Next we defined the parameters of tank dimension and location of sensor:

„t Sn"=00,00  
 „t Sh"=10,00  
 „t h1"=00,00  
 „t h2"=10,00  
 „t h3"=00,00  
 „t d"=04,00

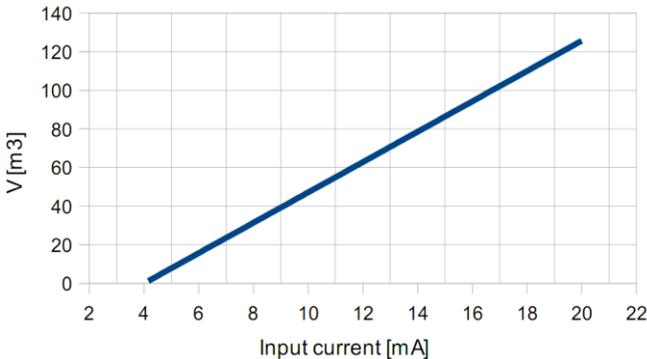


Figure 9.6 The volume characteristic of tank depending on input current in 4÷20mA range.

### **Example 8: Volume characteristics of a cylindrical tank in the horizontal position**

We assume that the user has tank for wheat in the shape of the cylinder located in horizontal position. The tank has dimension: height in first part is 2m, height in second part is 8.05m, diameter 3.26m and length of the sensor 10m. The output of signal of the sensor has 4÷20mA range.

In first step, we set type of input range 4÷20mA (see parameter MENU->"InPt"->"tYPE").

Next we defined the parameters of tank dimension and location of sensor:

```
„t Sn“=00,00  
„t Sh“=10,00  
„t h1“=02,00  
„t h2“=08,05  
„t h3“=00,00  
„t d“=03,26
```

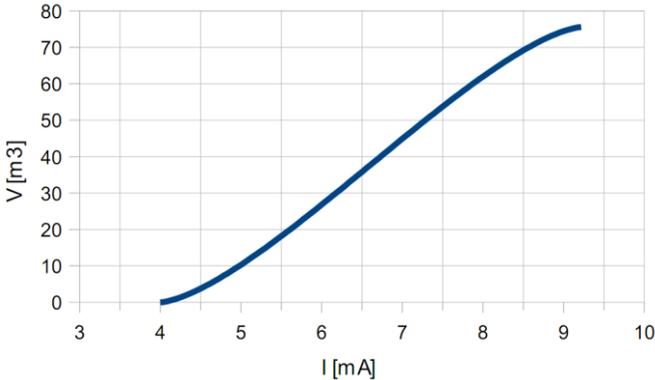


Figure 9.7 The volume characteristic of tank depending on input current in 4÷20mA range.

## **10. THE MODBUS PROTOCOL HANDLING**

Transmission parameters: 1 start bit, 8 data bits, 1 or 2 stop bit (2 bits are send, 1 and 2 bits are accepted when receive), no parity control

Baud rate: selectable from: 1200 to 115200 bits/second

Transmission protocol: MODBUS RTU compatible

The device parameters and display value are available via RS-485 interface, as HOLDING-type registers (numeric values are given in U2 code) of Modbus RTU protocol. The registers (or groups of the registers) can be read by 03h function, and wrote by 06h (single registers) or 10h (group of the registers) accordingly to Modbus RTU specification. Maximum group size for 03h and 10h functions cannot exceed 5 registers (for single frame).



The device interprets the broadcast messages, but then do not send the answers.

## 10.1. LIST OF REGISTERS

Register	Write	Range	Register description
01h	No	-999 ÷ 9999	Measurement value (no decimal point)
02h	No	0h, A0h, 60h	The status of the current measurement; <b>0h</b> - data valid; <b>A0h</b> – top border of the measurement range is exceeded; <b>60h</b> - bottom border of the measurement range is exceeded;
03h	Yes	0 ÷ 3	“ <b>Pnt</b> ” parameter in “ <b>InPt</b> ” menu (decimal point position) <b>0</b> - “ <b>0</b> ”; <b>1</b> - “ <b>0.0</b> ”; <b>2</b> - “ <b>0.00</b> ”; <b>3</b> - “ <b>0.000</b> ”
04h	Yes	see descr.	State of the relays and alarm LED (binary format) (1 - on, 0 - off): 00000000 000e00ba a - relay R1; b - relay R2; e - alarm LED; If written, only a, b bits are important (others are ignored) these bits allows user to control the relays via RS-485 interface
06h	No	-999 ÷ 9999	Peak (drop) value (no decimal point)
10h	Yes	0 ÷ 5	“ <b>tyPE</b> ” parameter in “ <b>InPt</b> ” menu (nominal input range). <b>0</b> - 0-20 mA range; <b>1</b> - 4-20 mA range; <b>2</b> - 0-10 V range; <b>3</b> - 2-10 V range; <b>4</b> - 0-5 V range; <b>5</b> - 1-5 V range
11h	Yes	0 ÷ 3	“ <b>CHAR</b> ” parameter in “ <b>InPt</b> ” menu (characteristic type) 0 - linear ; 1 - square; 2 - square root; 3 - user defined; 4 – volume characteristics of a cylindrical tank in the vertical position; 5 - volume characteristics of a cylindrical tank in the horizontal position
12h	Yes	0 ÷ 5	“ <b>FiLt</b> ” parameter in “ <b>InPt</b> ” menu (measurement filtering rate)
13h	Yes	0 ÷ 3	“ <b>Pnt</b> ” parameter in “ <b>InPt</b> ” menu (the copy of 03h register, decimal point position) <b>0</b> - “ <b>0</b> ”; <b>1</b> - “ <b>0.0</b> ”; <b>2</b> - “ <b>0.00</b> ”; <b>3</b> - “ <b>0.000</b> ”
14h	Yes	-999 ÷ 9999	“ <b>Lo C</b> ” parameter in “ <b>InPt</b> ” menu, no decimal point included
15h	Yes	-999 ÷ 9999	“ <b>Hi C</b> ” parameter in “ <b>InPt</b> ” menu, no decimal point included
16h	Yes	0 ÷ 999	“ <b>Lo r</b> ” parameter in “ <b>InPt</b> ” menu, in 0.1%
17h	Yes	0 ÷ 199	“ <b>Hi r</b> ” parameter in “ <b>InPt</b> ” menu, in 0.1%
20h <sup>2</sup>	Yes	0 ÷ 199	Device address
21h	No	21F0h	Device identification code (ID)
22h <sup>3</sup>	Yes	0 ÷ 7	“ <b>bAud</b> ” parameter in “ <b>rS</b> ” menu (baud rate); <b>0</b> - 1200 baud; <b>1</b> - 2400 baud; <b>2</b> - 4800 baud; <b>3</b> - 9600 baud; <b>4</b> - 19200 baud; <b>5</b> - 38400 baud; <b>6</b> - 57600 baud; <b>7</b> - 115200 baud
23h <sup>4</sup>	Yes	0 ÷ 1	“ <b>mbAc</b> ” parameter in “ <b>rS</b> ” menu (permission to write registers via RS-485 interface); <b>0</b> - write denied ; <b>1</b> - write allowed
24h	Yes	see descr.	Parameters of “ <b>SECU</b> ” menu (binary format (0 - „oFF”, 1 - „on”): <b>bit 0</b> - “ <b>A r1</b> ” parameter; <b>bit 1</b> - “ <b>A r2</b> ” parameter <b>bit 2</b> - “ <b>A r3</b> ” parameter; <b>bit 3</b> - “ <b>A r4</b> ” parameter
25h	Yes	0 ÷ 5	“ <b>rESP</b> ” parameter in “ <b>rS</b> ” menu (additional response delay); <b>0</b> - no additional delay; <b>1</b> - “ <b>10c</b> ” option; <b>2</b> - “ <b>20c</b> ” option; <b>3</b> - “ <b>50c</b> ” option; <b>4</b> - “ <b>100c</b> ” option; <b>5</b> - “ <b>200c</b> ” option;

27h	Yes	0 ÷ 99	“ <b>mbtO</b> ” parameter in “ <b>rS</b> ” menu (maximum delay between received frames); <b>0</b> - no delay checking; <b>1 ÷ 99</b> - maximum delay expressed in seconds
2Dh	Yes	1 ÷ 8	“ <b>bri</b> ” parameter (display brightness); <b>1</b> - the lowest brightness; <b>8</b> - the highest brightness
2Fh	Yes	0 ÷ 1	“ <b>Edit</b> ” parameter (numerical parameters edit mode); <b>0</b> - „ <b>dig</b> ” mode; <b>1</b> - „ <b>SLid</b> ” mode
30h	Yes	-999 ÷ 9999	“ <b>SEtP</b> ” parameter in “ <b>rEL1</b> ” menu, no decimal point included
31h	Yes	-999 ÷ 999	“ <b>HySt</b> ” parameter in “ <b>rEL1</b> ” menu, no decimal point included
32h	Yes	0 ÷ 3	“ <b>modE</b> ” parameter in “ <b>rEL1</b> ” menu: <b>0</b> - “ <b>noAC</b> ” mode; <b>1</b> - “ <b>on</b> ” mode; <b>2</b> - “ <b>oFF</b> ” mode; <b>3</b> - “ <b>in</b> ” mode; <b>4</b> - “ <b>out</b> ” mode; <b>5</b> - “ <b>modb</b> ” mode
33h	Yes	0 ÷ 999	“ <b>t on</b> ” parameter in “ <b>rEL1</b> ” menu, expressed in tenth of seconds or tenth of minutes depend on “ <b>unit</b> ” parameter - register no. 35h)
34h	Yes	0 ÷ 999	“ <b>toFF</b> ” parameter in “ <b>rEL1</b> ” menu, expressed in tenth of seconds or tenth of minutes depend on “ <b>unit</b> ” parameter - register no. 35h)
35h	Yes	0 ÷ 1	“ <b>unit</b> ” parameter in “ <b>rEL1</b> ” menu: <b>0</b> - seconds; <b>1</b> - minutes
36h	Yes	0 ÷ 2	“ <b>AL</b> ” parameter in “ <b>rEL1</b> ” menu: <b>0</b> - no changes; <b>1</b> - on; <b>2</b> - off
37h	Yes	-999 ÷ 9999	“ <b>SEt2</b> ” parameter in “ <b>rEL2</b> ” menu, no decimal point included
38h	Yes	-999 ÷ 9999	“ <b>SEtP</b> ” parameter in “ <b>rEL2</b> ” menu, no decimal point included
39h	Yes	-999 ÷ 999	“ <b>HySt</b> ” parameter in “ <b>rEL2</b> ” menu, no decimal point included
3Ah	Yes	0 ÷ 3	“ <b>modE</b> ” parameter in “ <b>rEL2</b> ” menu: <b>0</b> - “ <b>noAC</b> ” mode; <b>1</b> - “ <b>on</b> ” mode; <b>2</b> - “ <b>oFF</b> ” mode; <b>3</b> - “ <b>in</b> ” mode; <b>4</b> - “ <b>out</b> ” mode; <b>5</b> - “ <b>modb</b> ” mode
3Bh	Yes	0 ÷ 999	“ <b>t on</b> ” parameter in “ <b>rEL2</b> ” menu, expressed in tenth of seconds or tenth of minutes depend on “ <b>unit</b> ” parameter - register no. 3Dh)
3Ch	Yes	0 ÷ 999	“ <b>toFF</b> ” parameter in “ <b>rEL2</b> ” menu, expressed in tenth of seconds or tenth of minutes depend on “ <b>unit</b> ” parameter - register no. 3Dh)
3Dh	Yes	0 ÷ 1	“ <b>unit</b> ” parameter in “ <b>rEL2</b> ” menu: <b>0</b> - seconds; <b>1</b> - minutes
3Eh	Yes	0 ÷ 2	“ <b>AL</b> ” parameter in “ <b>rEL2</b> ” menu: <b>0</b> - no changes; <b>1</b> - on; <b>2</b> - off
3Fh	Yes	-999 ÷ 9999	“ <b>SEt2</b> ” parameter in “ <b>rEL2</b> ” menu, no decimal point included
50h	Yes	0 ÷ 1	“ <b>modE</b> ” parameter in “ <b>HOLd</b> ” menu (type of detected changes): <b>0</b> - peaks; <b>1</b> - drops
51h	Yes	0 ÷ 9999	“ <b>PEA</b> ” parameter in “ <b>HOLd</b> ” menu (minimum detectable change, no decimal point included)
52h	Yes	1 ÷ 199	“ <b>time</b> ” parameter in “ <b>HOLd</b> ” menu, maximum peaks' (or drops') display time expressed in seconds

53h	Yes	0 ÷ 1	"HdiS" parameter in "HOLd" menu: <b>0</b> - "rEAL" mode ; <b>1</b> - "HOLd" mode
54h	Yes	0 ÷ 1	"H r1" parameter in "HOLd" menu : <b>0</b> - "rEAL" mode ; <b>1</b> - "HOLd" mode
55h	Yes	0 ÷ 1	"H r2" parameter in "HOLd" menu: <b>0</b> - "rEAL" mode ; <b>1</b> - "HOLd" mode
70h5	Yes	-999 ÷ 1999	The value of „X" coordinate of point <b>no. 1</b> of the user defined characteristic, expressed in 0.1%
71h5	Yes	-999 ÷ 9999	The value of „Y" coordinate of point <b>no. 1</b> of the user defined characteristic, no decimal point included
72h5 ÷ 95h5			Further pairs of „X" - „Y" coordinates of points <b>no. 2 ÷ 19</b> of the user defined characteristic
96h5	Yes	-999 ÷ 1999	The value of „X" coordinate of point <b>no. 20</b> of the user defined characteristic, expressed in 0.1%
97h5	Yes	-999 ÷ 9999	The value of „Y" coordinate of point <b>no. 20</b> of the user defined characteristic, no decimal point included

- 2 - after writing to register no 20h the device responds with an "old" address in the message.
- 3 - after writing to register no 22h the device responds with the new baud rate.
- 4 - the value of the "mbAc" parameter is also connected to write to this register, so it is possible to block a writes, but impossible to unblock writes via RS-485 interface, The unblocking of the writes is possible from menu level only.
- 5 - the pairs of „X -Y" coordinates may be defined for any free point. The pair is "free" (it means that particular point is not defined) if „X" coordinate of this point is equal 8000h. After writing both X and Y coordinate the point is defined and used in calculation of result. The coordinates of any point can be changed at any time.

## 10.2. TRANSMISSION ERRPRS DESCRIPTION

If an error occurs while write or read of single register, then the device sends an error code according to Modbus RTU specifications (example message no 1).

Error codes:

- 01h** - illegal function (only functions 03h, 06h and 10h are available)
- 02h** - illegal register address
- 03h** - illegal data value
- 08h** - no write permission ( see: "mbAc" parameter)
- A0h** - exceed of upper border of input range
- 60h** - exceed of lower border of input range

A0h and 60h codes can appear only during reg. 01h is reading by 03h function (read of a single register).

### 10.3. EXAMPLES OF QUERY/ANSWER FRAMES

Examples apply for device with address 1. All values are represented hexadecimal.

**Field description:**

- ADDR** Device address on Modbus network
- FUNC** Function code
- REG H,L** Starting address (address of first register to read/write, Hi and Lo byte)
- COUNT H,L** No. of registers to read/write (Hi and Lo byte)
- BYTE C** Data byte count in answer frame
- DATA H,L** Data byte (Hi and Lo byte)
- CRC L,H** CRC error check (Hi and Lo byte)

**1. Read of the displayed value (measurement), PMS-620N device address = 01h:**

ADDR	FUNC	REG H,L		COUNT H,L		CRC L,H	
01	03	00	01	00	01	D5	CA

a) The answer (we assume that the measure result is not out of range):

ADDR	FUNC	BYTE C	DATA H,L		CRC L,H	
01	03	02	00	FF	F8	04

DATA H, L - displayed value = 255, no decimal point.  
 Decimal point position can be read from reg. 03h.

b) The answer (if an error occur):

ADDR	FUNC	ERROR	CRC L,H	
01	83	60	41	18

ERROR - error code = 60h, bottom border of the measurement range is exceeded.

**2. Read of device ID code**

ADDR	FUNC	REG H,L		COUNT H,L		CRC L,H	
01	03	00	21	00	01	D4	00

The answer:

ADDR	FUNC	BYTE C	DATA H,L		CRC L,H	
01	03	02	20	B7	E1	F2

DATA - identification code (21F0h).

**3. Change of the device address from 1 to 2 (write to reg. 20h)**

ADDR	FUNC	REG H,L		DATA H,L		CRC L,H	
01	06	00	20	00	02	09	C1

DATA H – 0;  
 DATA L - new device address (2).

The answer (the same as the message):

ADDR	FUNC	REG H,L		DATA H,L		CRC L,H	
01	06	00	20	00	02	09	C1

**4. Change of baud rate of all devices connected to the net (BROADCAST message).**

ADDR	FUNC	REG H,L		COUNT H,L		CRC L,H	
01	06	00	22	00	04	29	D2

DATA H - 0  
 DATA L - 4, new baud rate 19200 baud



Devices do not reply to BROADCAST-type messages.

**5. Read of the registers 1, 2 and 3 in one message (example of reading a number of registries in one frame):**

ADDR	FUNC	REG H,L		COUNT H,L		CRC L,H	
01	03	00	01	00	03	54	0B

COUNT L - the count of being read registers (max16)

The answer:

ADDR	FUNC	BYTE C	DATA H1,L1		DATA H2,L2		DATA H3,L3		CRC L,H	
01	03	06	00	0A	00	00	00	01	78	B4

DATA H1, L1 - reg. 01h (10 - displayed value "1.0");  
 DATA H2, L2 - reg. 02h (0 - no errors);  
 DATA H3, L3 - reg. 03h (1 - decimal point position "0.0").



**There is no full implementation of the Modbus Protocol in the device. The functions presented above are available only.**

## 11. DEFAULT AND USER'S SETTINGS LIST

<i>Parameter</i>	<i>Description</i>	<i>Default value</i>	<i>User's value</i>	<i>Desc. page</i>
<b>Parameters of relay R1 operation ("rEL1" menu)</b>				
SEtP	Relay R1 threshold	20.0		19
SEt2	Relay R1 second threshold	30.0		19
HYSt	Hysteresis of relay R1	0.0		19
modE	Operation mode of relay R1	in		19
t on	Turn on delay of relay R1	0.0		20
toFF	Turn off delay of relay R1	0.0		20
unit	Unit of "t on", "toFF" parameters of relay R1	SEC		20
AL	Reaction for critical situation of relay R1	oFF		20
<b>Parameters of relay R2 operation ("rEL2" menu)</b>				
SEtP	Relay R2 threshold	40.0		19
SEt2	Relay R2 second threshold	50.0		19
HYSt	Hysteresis of relay R2	0.0		19
modE	Operation mode of relay R2	in		19
t on	Turn on delay of relay R2	0.0		20
toFF	Turn off delay of relay R2	0.0		20
unit	Unit of "t on", "toFF" parameters of relay R2	SEC		20
AL	Reaction for critical situation of relay R2	oFF		20
<b>Configuration of measurement input ("inPt" menu)</b>				
tYPE	Input mode	„4-20"		21
CHAr	Conversion characteristic mode	Lin		21
FiLt	Filtering ratio	0		21
Pnt	Decimal point position	0.0		21
Lo C	Minimum displayed value (for nominal range)	000.0		21
Hi C	Maximum displayed value (for nominal range)	100.0		21
Lo r	Extension of the bottom of the nominal input range	5.0 (%)		24
Hi r	Extension of the top of the nominal input range	5.0 (%)		24
<b>Display parameters</b>				
bri	Display brightness	bri6		25

<b>Configuration of peaks detection function (“HOLd” menu)</b>				
modE	Kind of detected changes	norm		25
PEA	Minimum detected change	0.0		25
timE	Maximum time of peak displaying	0.0		26
HdiS	The type of displayed value	HOLd		26
H r1	Source of relay R1, and LED R1 control	rREAL		26
H r2	Source of relay R2, and LED R2 control	rREAL		26
<b>Settings of access to the configuration parameters (“SECu” menu)</b>				
A r1	Permission to changes of relay R1 threshold without of the user password knowledge	on		26
A r2	Permission to changes of relay R2 threshold without of the user password knowledge	on		26
<b>RS 485 interface configuration (menu “rS”)</b>				
Addr	Device address	0		26
bAud	Baud rate	9.6		26
mbAc	Permission to changes of configuration registers	on		26
mbtO	Maximum delay between received messages	0		27
rESP	Additional delay of answer transmission	Std		27
<b>Configuration of numerical parameters edition</b>				
Edit	Numerical parameters edit mode	dig		27



